






 

 



 

 



 


 
 







 

 



 






 


 




 
 


 


 



 








Original	Replacement	Original	Replacement
 Power	 Power	 Left / Vol-	 Vol -
 Mute	 Mute	 OK	 Ok
 <<	 <<	 Info	 Info
 >>	 >>	 FAV	 Pre Ch
  <<	  <<	 TV / Radio	 TV/R
 >>	 >>	 Recall	 Back
 PG+	 Smart	 1	 1
 PG-	 Media	 2	 2
 Menu	 Menu	 3	 3
 Exit	 Exit	 4	 4
 Up / CH+	 Up	 5	 5
 Up / CH+	 Ch +	 6	 6
 Down / CH-	 Down	 7	 7
 Down / CH-	 Ch -	 8	 8
 Right / Vol+	 Right	 9	 9
 Right / Vol+	 Vol +	 0	 0
 Left / Vol-	 Left	 Audio	 Dual





Original	Replacement
 Sub	 Subt
 TTX	 Text
 EPG	 Guide
 Play	 Play
 Pause / Timeshift	 Pause
 Stop	 Stop
 Rec	 Rec
 Red / Zoom	 Red
 Red / Zoom	 Eject
 Green / Aspect	 Green
 Yellow / V-Format	 Yellow
 Yellow / V-Format	 Format
 Blue / Timer	 Blue
 Blue / Timer	 AV

Original	Replacement

