



Original	Replacement	Original	Replacement
 Power	 Power	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 1	 1	 CH+ / Page+	 CH+ / Page+
 2	 2	 Info	 Info / Angle
 3	 3	 Vol-	 Vol-
 4	 4	 CH- / Page-	 CH- / Page-
 5	 5	 Red	 Red / Netflix / Search
 6	 6	 Green	 Green / APP / Repeat
 7	 7	 Yellow	 Yellow / YouTube / Repeat
 8	 8	 Blue	 Blue / Prime Video / Random
 9	 9	 Up	 Up
 Fav	 Fav / Marker / PC	 Left	 Left
 0	 0	 OK	 OK
 TXT	 Text / Goto	 Right	 Right
 F.List	 Smart / List	 Menu	 Menu / Home
 Media	 Display / Media	 Down	 Down
 Recall	 Back / Return	 Exit	 Exit / Cancel / Clear





	Original	Replacement		Original	Replacement
	TV/RAD	 TV/Radio /			
	Signal	 Setup / OPT /			
	<<	 << / Tune-			
	Play	 Play / Slow			
	Stop	 Stop / Hold			
	>>	 >> / Tune+			
	Pause	 Pause / Step / Freeze			
	Rec	 Rec / Rec Mode			

	Original	Replacement		Original	Replacement

