

 

 



 

 


 

 


 
 



 

 

















Original	Replacement
	 Power
	 Audio / Lang I/II
	 Mute / Dimmer
	 TV/Radio /
	 Subtitle / EQ
	 Guide / EPG / -/--
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Fav / Marker / PC

Original	Replacement
	 0
	 Back / Return
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Info / Angle
	 CH- / Page-
	 Down
	 Smart / List
	 Display / Media
	 Shift + 8





Original	Replacement	Original	Replacement
	 Play / Slow		
	 Pause / Step / Freeze		
	 Red / Netflix / Search		
	 Fast Reverse / Preset-		
	 Yellow / YouTube / Repeat		
	 Fast Forward / Preset+		
	 Stop / Hold		
	 Green / APP / Repeat		
	 Tune-		
	 Tune+		
	 Blue / Prime Video / Random		
	 Rec / Rec Mode		

