


 
 
 

















Original	Replacement
	Power
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Mute / Dimmer
	0
	Back / Return
	Subtitle / EQ
	Sound / Title
	Eject / Surround

Original	Replacement
	Vol+
	Shift + Menu /
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	Smart / List
	D.Menu / Top
	Picture / Format
	Menu / Home
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Info / Angle
	Down





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡i]	 << / Tune-
 Play	 Play / Slow
 Pause / [≡◇]	 Pause / Step / Freeze
 >> / [≡?]	 >> / Tune+
  << / [≡o]	  << / Preset-
 Stop / [≡+]	 Stop / Hold
 >>  / [≡x]	 >>  / Preset+
 Rec	 Rec / Rec Mode
 [ / ≡]	 Zoom / Size
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /

Original	Replacement
 USB	 Shift + 8

