








Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sound	 Sound / Title
 Vol+	 Vol+
 Vol-	 Vol-
 +10	 Guide / EPG / -/--
 Up	 Up
 Left	 Left

Original	Replacement
 Ent	 OK
 Right	 Right
 Down	 Down
 Function	 Smart / List
 Return	 Back / Return
 <I Slow	 CH- / Page-
 Slow I>	 CH+ / Page+
 Pause	 Pause / Step / Freeze
 Prev / Preset-	 I<< / Preset-
 Next / Preset+	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 << / Tuning-	 << / Tune-
 >> / Tuning+	 >> / Tune+
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Clear	 Exit / Cancel / Clear





	Original	Replacement
MEMORY	Memory	PC FAV MARKER Fav / Marker / PC
DISP	Disp	MEDIA DISPLAY Display / Media
MENU	Menu	HOME MENU Menu / Home
GOTO	Goto	GOTO TEXT Text / Goto
SETUP	Setup	OPT-TOOLS SETUP Setup / OPT /
ZOOM	Zoom	SIZE ZOOM Zoom / Size
SUBTITLE	Subtitle	EQ SUBTITLE Subtitle / EQ
FM MODE A-B REPEAT	FM Mode / Repeat A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat
BAND DISC REPEAT	Band / Repeat	APP REPEAT Green / APP / Repeat

	Original	Replacement

