



| Original | Replacement |
|------------|---------------|
| Power | Power |
| Tv/AV | AV |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| -/-- | Shift + Guide |
| Eject | Eject |
| Play/Pause | Play |
| Stop | Stop |
| Return | Back |

| Original | Replacement |
|-----------|--------------|
| Mute | Mute |
| Vol+ | Vol + |
| Vol- | Vol - |
| Up | Up |
| CH+ | Ch + |
| CH- | Ch - |
| Down | Down |
| Right | Right |
| Left | Left |
| Sys Menu | Menu |
| Display | Shift + Info |
| OK | Ok |
| Picture | Format |
| Sound | Dual |
| Timer | Shift + AV |
| Nicam/A2 | Media |
| Lan/Prog- | Shift + Ch - |





| Original | Replacement |
|-----------------------|--------------|
| Zoom/Prog+ | Shift + Ch + |
| Sub | Subt |
| Goto | Options |
| SET/Tv/TXT/DVB- | Text |
| ANG/Reveal/Exit | Exit |
| Menu/Cancel/Tv Format | D. Menu |
| Title/info | Info |
| <</Hold/Languag | << |
| >>/Size/Text | >> |
| I<</Subpage | I<< |
| FAV | Pre Ch |
| >>I/Index | >>I |
| EPG | Guide |
| Red/Pro | Red |
| Tv/Radio | TV/R |
| Green/Slow/Audio | Green |
| Yellow/Rep/Freeze | Yellow |

| Original | Replacement |
|-------------------|-------------|
| Blue/A-B/Subtitle | Blue |

