 



 


 
 
 


 

 

 

 

 

 







 
 






Original	Replacement
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/-
 FAV	 Fav / Marker / PC

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 Red/O Lang	 Red / Netflix / Search






 


 

 

 


 





 
 
 
 
 
 




 

 



 





 

 

 



 



 

 

 

 
 




Original	Replacement	Original	Replacement
 Red/O) Lang	 Audio / Lang I/II		
 Green/Subtitles	 Subtitle / EQ		
 Green/Subtitles	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto		
 Stop Text	 Shift + Stop /		
 ??? Text	 Sleep / Timer		
 Zoom Text	 Zoom / Size		
 Media/Digital	 Display / Media		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 T-Link	 D.Menu / Top		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		





Original	Replacement
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home

Original	Replacement
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+ Tv	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol- Tv	 Vol-
 PR-	 CH- / Page-
 Mute Tv	 Mute / Dimmer
 Red/O Lang	 Audio / Lang I/II
 Red/O Lang	 Red / Netflix / Search
 Subtitles	 Subtitle / EQ





Original	Replacement	Original	Replacement
Green/Subtitles	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Violet/Text	Text / Goto		
<<	<< / Tune-		
Play	Play / Slow		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		





Original	Replacement
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	Shift + Guide / EPG / --
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / --
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
PR +	CH+ / Page+
Vol -	Vol-
PR -	CH- / Page-
Mute	Mute / Dimmer
Red / A-B	Shift + Yellow / YouTube /
Red / A-B	Red / Netflix / Search





Original	Replacement	Original	Replacement
Subtitles Green / Subtitles	APP Green / APP / Repeat		
Subtitles Green / Subtitles	EQ Subtitle / EQ		
Yellow / Size	YouTube Yellow / YouTube / Repeat		
Yellow / Size	SIZE Zoom / Size		
Blue / Lang	Prime Video Blue / Prime Video / Random		
Blue / Lang	LANG I/II Audio / Lang I/II		
TEXT Purple / Text	GOTO Text / Goto		
STOP Text Stop	SHIFT + HOLD Shift + Stop /		
Text ???	TIMER Sleep / Timer		
ZOOM Text Zoom	SHIFT + SIZE Shift + Zoom /		
<<<	TUNE- <<< / Tune-		
Play	SLOW Play / Slow		
>>>	TUNE+ >>> / Tune+		
Stop	HOLD Stop / Hold		
Pause	STEP-FREEZE Pause / Step / Freeze		

