














 
 

 
 








 
 





 









 
 
 

 
 
 



 


 
 



 


 
 






 

 




Original		Replacement		Original		Replacement	
	Power		Power		*		Menu
	Mute		Mute		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		≡		Options
	4		4		←		Back
	5		5		Source		AV
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	T		TV/R		Exit		Exit
	List		List		Text		Text
	Vol+		Vol +		O)/Lang		Dual
	Vol-		Vol -		Guide		Guide
	[i]		Info		Subt.		Subt





Original		Replacement		Original		Replacement	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Play		Play				
	Stop		Stop				
	Zoom		Eject				
	Netflix		Media				

