





 

 
 

 





 







































 

 
 






Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	(T)		Display / Media
	0		0
	List		Smart / List
	Vol+		Vol+
	[i]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	*		Setup / OPT /
	P-		CH- / Page-
	Home		Menu / Home
	Up		Up
	≡		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Text		Text / Goto
	O)/Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ





	Original	Replacement	Original	Replacement
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	<<	<< / Tune-		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Zoom	Zoom / Size		
	Play	Play / Slow		
	Stop	Stop / Hold		
	Netflix	+ Shift + Red / Netflix /		

