

 
 


 
 
 

 
 





 




 
 
 

 
 
 



 






Original	Replacement	Original	Replacement
	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

Original	Replacement	Original	Replacement
	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<



 
 
 





Original		Replacement		Original		Replacement	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡◆]/Wide		Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[::]/Subtitle		Back				




 

 





 












Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio	 + 	Shift + Yellow
	Blue/Angle		Blue

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Time	 + 	Shift + AV
	Zoom	 + 	Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B	 + 	Shift + Play
	C		Yellow
	Title		Info
	Display	 + 	Shift + Info





Original		Replacement		Original		Replacement	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

