

























 




 



 


























Original	Replacement	Original	Replacement
Audio+	 +  Shift + Vol+	Yellow	 Yellow / YouTube / Repeat
Reveal	 Setup / OPT /	Blue	 Blue / Prime Video / Random
Update	 Smart / List	Audio-	 +  Shift + Vol-
Bright- Sys	 +  Shift + CH- /	3	 3
Bright+ Mode	 +  Shift + CH+ /	Tone-	 << / Tune-
AV 2	 +  Shift + AV / Input / RDS	Tone+	 >> / Tune+
4	 4	Color+ P.Std	 Picture / Format
5	 5	Contrast+	 >>  / Preset+
6	 6	Color- S.Std	 Sound / Title
7	 7	Contrast-	 I<< / Preset-
8	 8	Surround	 Eject / Surround
9	 9	Nicam/Mono	 +  Shift + Audio / Lang I/II
Guide -/-- 1.	 Guide / EPG / -/--	Level L	 +  Shift + Left
0/10	 0	Level R/Woofer	 +  Shift + Right
2.Fav P/C 2.	 Fav / Marker / PC	Display	 Display / Media
Red	 Red / Netflix / Search	Mute	 Mute / Dimmer
Green	 Green / APP / Repeat	Txt Stop	 Stop / Hold

Original	Replacement	Original	Replacement
Audio+	 +  Shift + Vol+	Yellow	 Yellow / YouTube / Repeat
Reveal	 Setup / OPT /	Blue	 Blue / Prime Video / Random
Update	 Smart / List	Audio-	 +  Shift + Vol-
Bright- Sys	 +  Shift + CH- /	3	 3
Bright+ Mode	 +  Shift + CH+ /	Tone-	 << / Tune-
AV 2	 +  Shift + AV / Input / RDS	Tone+	 >> / Tune+
4	 4	Color+ P.Std	 Picture / Format
5	 5	Contrast+	 >>  / Preset+
6	 6	Color- S.Std	 Sound / Title
7	 7	Contrast-	 I<< / Preset-
8	 8	Surround	 Eject / Surround
9	 9	Nicam/Mono	 +  Shift + Audio / Lang I/II
Guide -/-- 1.	 Guide / EPG / -/--	Level L	 +  Shift + Left
0/10	 0	Level R/Woofer	 +  Shift + Right
2.Fav P/C 2.	 Fav / Marker / PC	Display	 Display / Media
Red	 Red / Netflix / Search	Mute	 Mute / Dimmer
Green	 Green / APP / Repeat	Txt Stop	 Stop / Hold



Original	Replacement	Original	Replacement
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		

Original	Replacement	Original	Replacement
Volume+	 Vol+	Volume-	 Vol-
Chan.Up	 CH+ / Page+	Chan.Down	 CH- / Page-
Volume-	 Vol-	1	 1
Menu audio	 Audio / Lang I/II	2	 2
Chan.Down	 CH- / Page-		

