












 





 

 

 
 
 



 


 
 
 


 
 

 
 







 

 
 


 
















Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute
 Netflix	 Media	 Home	 Smart
 Source	 AV	 P +	 Ch +
 1	 1	 P -	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Q.Menu	 D. Menu
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Back	 Back
 0	 0	 Exit	 Exit
 TV	 TV/R	 i	 Info
 Recall	 Pre Ch	 Video	 Shift + Smart
 V +	 Vol +	 EPG	 Guide
 V -	 Vol -	 YouTube	 Shift + Media



