




Original		Replacement		Original		Replacement	
	Power		Power		Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		SFI / EPG		SFI / EPG		Guide / EPG / -/--
	6		Exit / Recall		Exit / Recall		Back / Return
	7		Exit / Recall		Exit / Recall		Exit / Cancel / Clear
	8		Info		Info		Info / Angle
	9		TV / Radio		TV / Radio		TV/Radio /
	0		Menu		Menu		Menu / Home
	AV		AV / Input / RDS		Prog+		CH+ / Page+
	OPT		Setup / OPT /		Prog-		CH- / Page-
	Red		Red / Netflix / Search		Vol+		Vol+
	Green		Green / APP / Repeat		Vol-		Vol-
	Yellow		Yellow / YouTube / Repeat		Sleep		Sleep / Timer





Original	Replacement	Original	Replacement
 TXT	 Text / Goto		
 Still	 Pause / Step / Freeze		
 Sound	 Sound / Title		

