



Original	Replacement	Original	Replacement
 Power	 Power	 V-	 Vol-
 Source	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Music/Camera	 Display / Media
 V+	 Vol+	 TV Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */O	 Shift + 1
 P+	 CH+ / Page+	 */Q	 Shift + 2





Original	Replacement	Original	Replacement
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG.	 LANG I/II AUDIO Audio / Lang I/II		
 [=].	 TITLE SOUND Sound / Title		
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /		
 <<	 TUNE- << / Tune-		
	 STEP-FREEZE    Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 	 REC MODE Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

