 



 

































 



 

 





 

 







 



































Original		Replacement		Original		Replacement	
	Standby		Power		Down / CH -		Down
	Mute		Mute / Dimmer		Timeshift		Sleep / Timer
	PG +		>>I / Preset+		1		1
	PG -		I<< / Preset-		2		2
	DTV / VCR		Smart / List		3		3
	Vol +		Vol+		EPG		Guide / EPG / -/--
	Info		Info / Angle		4		4
	Vol -		Vol-		5		5
	Menu		Menu / Home		6		6
	Up / CH +		CH+ / Page+		Recall		Back / Return
	Up / CH +		Up		7		7
	Exit		Exit / Cancel / Clear		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		Audio		Audio / Lang I/II
	Record		Rec / Rec Mode		TV / Radio		TV/Radio /
	Down / CH -		CH- / Page-		FAV		Fav / Marker / PC





Original	Replacement	Original	Replacement
 File	 Display / Media		
 TTX	 Text / Goto		
 Subtitle	 Subtitle / EQ		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Red / Stop	 Red / Netflix / Search		
 Red / Stop	 Stop / Hold		
 Green / Step	 Green / APP / Repeat		
 Green / Step	 Shift + Pause / Step / Step /		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Yellow / Pause	 Pause / Step / Freeze		
 Blue / Play	 Blue / Prime Video / Random		
 Blue / Play	 Play / Slow		

