






























 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Zoom	 Red / Netflix / Search
 Red / Zoom	 Zoom / Size
 Green / Aspect	 Green / APP / Repeat
 Green / Aspect	 Setup / OPT /
 Yellow / V-Format	 Picture / Format
 Yellow / V-Format	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer
 TTX	 Text / Goto
 Fav	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow

Original	Replacement
 Pause / Timeshift	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up / CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Right
 Info	 Info / Angle
 Down / Ch-	 Down
 EPG	 Guide / EPG / -/--
 V+	 Vol+
 PG+	 Shift + CH+ /
 P+	 CH+ / Page+
 V-	 Vol-
 PG-	 Shift + CH- /

Page-





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	TV/Radio		TV/Radio /				
	0		0				
	Recall		Back / Return				

