 

 

 



 



 


 






 























 



 
 






 



 









Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 ATV/DTV	 Smart / List	 Digital Menu	 D.Menu / Top
 Tv/DVD	 Display / Media	 DVD Menu	 Menu / Home
 Eject	 Eject / Surround	 Top Menu	 Shift + D.Menu / Top Menu
 1	 1	 Guide	 Guide / EPG / -/-
 2	 2	 CH+	 CH+ / Page+
 3	 3	 CH-	 CH- / Page-
 4	 4	 Vol+	 Vol+
 5	 5	 Vol-	 Vol-
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter/CH List	 OK
 Info	 Info / Angle	 Menu/Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 Exit/Cancel	 Exit / Cancel / Clear
 Tv/Radio	 TV/Radio /	 Return	 Back / Return





Original		Replacement		Original		Replacement	
	Play		Play / Slow		Jump		Sound / Title
	Stop		Stop / Hold		PIC Size		Picture / Format
	I<<		I<< / Preset-		Sleep		Sleep / Timer
	<</REV		<< / Tune-				
	>>/FF		>> / Tune+				
	>>I		>>I / Preset+				
	Red/<I		Red / Netflix / Search				
	Green/Pause		Green / APP / Repeat				
	Yellow/Play Mode		Yellow / YouTube / Repeat				
	Blue/I>		Blue / Prime Video / Random				
	Marker		Fav / Marker / PC				
	Angle		Shift + Info / Angle				
	Repeat A-B		Shift + Yellow / YouTube /				
	Text		Text / Goto				
	Subtitle		Subtitle / EQ				
	Audio Select		Audio / Lang I/II				
	Zoom/CH RTN		Zoom / Size				

