 

 

 

 

 

 

 


 
 





 





 

 

 

 

 







 



 



 

 





 



 



 









 













Original		Replacement		Original		Replacement	
	Power		Power		Recall		Fav / Marker / PC
	Source		AV / Input / RDS		[i+]		Info / Angle
	TV		Shift + 1		AD		Sound / Title
	[<>]		Picture / Format		Vol+		Vol+
	3D		Shift + 3		Vol-		Vol-
	O)/I/II		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		P+		CH+ / Page+
	1		1		P-		CH- / Page-
	2		2		Text		Text / Goto
	3		3		Quick		Display / Media
	4		4		List		Smart / List
	5		5		Menu		Menu / Home
	6		6		Guide		Guide / EPG / -/-
	7		7		[.]		D.Menu / Top
	8		8		[>]		Setup / OPT /
	9		9		Exit		Exit / Cancel / Clear
	0		0		Up		Up





Original	Replacement	Original	Replacement
	Down		Blue / Prime Video / Random
	Right		>> / Tune+
	Left		I<< / Preset-
	Back		>>I / Preset+
	OK		TV/Radio /
	Shift + Right		
	Play / Slow		
	Shift + Left		
	Stop / Hold		
	Pause / Step / Freeze		
	Shift + Up		
	Shift + Down		
	Rec / Rec Mode		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	<< / Tune-		

