


 




 



 


 
 


 

 













 
 




 

 

 

 

 





 



 
 
 




 
 

 




 
 
 
 





Original		Replacement		Original		Replacement	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Home		Smart
	9		9		Back		Back
	0		0		Exit		Exit
	List		List		Red		Red
	Recall		Pre Ch		Green		Green
	Mute		Mute		Yellow		Yellow
	[i+]		Info		Blue		Blue
	P+		Ch +		Guide		Guide





Original		Replacement		Original		Replacement	
	Subtitle		Subt				
	[<>]		Format				
	O)I/I		Dual				
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Text		Text				
	Quick		Options				
	*/O		TV/R				
	*/Q		3D				
	[>]		Shift + Options				

