



 

 

 







 
 











 

 

 

 

 

 



 

 



 

 

 

 



 



| Original | Replacement |
|---|---|
|  Open/Close |  Eject / Surround |
|  Power |  Power |
|  Tv/VCR |  AV / Input / RDS |
|  VCR |  Shift + 4 |
|  DVD |  Shift + 2 |
|  Clock Counter |  Info / Angle |
|  Program |  TV/Radio / |
|  One Touch |  Green / APP / Repeat |
|  Instant Skip |  Text / Goto |
|  Setup/VCR |  Setup / OPT / |
|  Zoom |  Zoom / Size |
|  I> Slow |  Blue / Prime Video / Random |
|  Top Menu |  D.Menu / Top |
|  Up |  Up |
|  CH+ |  CH+ / Page+ |
|  DVD Menu |  Menu / Home |
|  Left/Set- |  Left |

| Original | Replacement |
|--|---|
|  Enter |  OK |
|  Right/Set+ |  Right |
|  Clear/Cancel |  Exit / Cancel / Clear |
|  CH- |  CH- / Page- |
|  Down |  Down |
|  Return |  Back / Return |
|  Stop |  Stop / Hold |
|  Pause/Step |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  I<< Skip/Index- |  I<< / Preset- |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Skip |  >>I / Preset+ |
|  Rec/OTR |  Rec / Rec Mode |
|  Timer Rec |  Sleep / Timer |
|  Play |  Red / Netflix / Search |
|  A-B RPT |  Yellow / YouTube / Repeat |





| | Original | Replacement | Original | Replacement |
|---|----------------------------|---|----------|-------------|
|  | 1 |  1 | | |
|  | 2 |  2 | | |
|  | 3 |  3 | | |
|  | Display/Call |  Display / Media | | |
|  | 4 |  4 | | |
|  | 5 |  5 | | |
|  | 6 |  6 | | |
|  | Jump/Zero Return |  Guide / EPG / -/- | | |
|  | 7 |  7 | | |
|  | 8 |  8 | | |
|  | 9 |  9 | | |
|  | 0/AUX |  0 | | |
|  | Camera/Angle/Counter Reset |  Picture / Format | | |
|  | [...]/Subtitle/ATR |  Subtitle / EQ | | |
|  | 0)/Audio/Audio Select |  Audio / Lang I/II | | |
|  | Marker |  Fav / Marker / PC | | |

