










 



 

 

 

 

 

 




 



 

 

 

 



 



 



 

 





 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		Prog-		Ch -
	Open / Close		Eject		Time Slip		Sleep
	Input Select		AV		Info		Info
	HDMI		Media		Text		Text
	1		1		Audio		Dual
	2		2		Subtitle		Subt
	3		3		Guide		Guide
	4		4		Top Menu		Menu
	5		5		Disc Menu		D. Menu
	6		6		Up		Up
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Right		Right
	0		0		Down		Down
	SAT Link		Smart		Display		Shift + Info
	Clear		Exit		Return		Back
	Prog+		Ch +		Red		Red





Original	Replacement
Green	Green
Yellow / Mode	Yellow
Blue / Search	Blue
Blue / Search	TV/R
<< REV	<<
Play	Play
>> FWD	>>
I<< Skip	<<
Stop	Stop
>>I Skip	>>I
Pause	Pause
VCR	Vol +
DVD	Vol -
Instant Skip	3D
Dubbing	Format
Rec	Rec
Rec Mode	Shift + Rec

Original	Replacement
Setup	Options
Timer Set	Shift + Smart
Timer Prog	Shift + Media
1.3x/0.8x Play	Shift + Play

