



Original		Replacement		Original		Replacement	
	Open / Close		Eject / Surround		8		8
	FL Dimmer		Mute / Dimmer		9		9
	On / Standby		Power		0		0
	Setup		Setup / OPT /		+10		Guide / EPG / -/-
	Display		Display / Media		T / Search		Red / Netflix / Search
	Zoom		Zoom / Size		Top Menu		D.Menu / Top
	3D		Shift + 3		Up		Up
	Angle		Info / Angle		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Left		Left
	Audio		Audio / Lang I/II		Enter		OK
	1		1		Right		Right
	2		2		Clear		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Return		Back / Return
	5		5		REV		<< / Tune-
	6		6		Play		Play / Slow
	7		7		FWD		>> / Tune+





Original		Replacement		Original		Replacement	
	Pause / Step		Pause / Step / Freeze				
	I<< Skip		I<< / Preset-				
	Stop		Stop / Hold				
	Skip >>I		>>I / Preset+				
	Slow		Shift + Play /				
	Random		Blue / Prime Video / Random				
	Memory		Smart / List				
	Repeat		Green / APP / Repeat				
	A-B RPT		Yellow / YouTube / Repeat				

