







 













 








 







 

 













 

 

 










 





 
 
 
 
 
 

 

 
 
 






| Original | Replacement | Original | Replacement |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Power |  Power |  Progressive |  TV/Radio / |
|  Dimmer |  Mute / Dimmer |  DVD Menu |  D.Menu / Top |
|  Play |  Play / Slow |  Rec Menu |  Setup / OPT / |
|  Pause |  Pause / Step / Freeze |  CHP Divide |  Text / Goto |
|  Stop |  Stop / Hold |  Input Select |  AV / Input / RDS |
|  Rec |  Rec / Rec Mode |  Content Menu |  Menu / Home |
|  << Picture |  << / Tune- |  Up |  Up |
|  Picture Search |  >> / Tune+ |  DVD Angle |  Info / Angle |
|  I<< Skip |  I<< / Preset- |  Left |  Left |
|  Skip >>I |  >>I / Preset+ |  Enter |  OK |
|  FL Select |  Sound / Title |  Right |  Right |
|  DVD Audio |  Audio / Lang I/II |  Clear |  Exit / Cancel / Clear |
|  DVD Subtitle |  Subtitle / EQ |  Down |  Down |
|  Open / Close |  Eject / Surround |  DVD Return |  Back / Return |
|  P in P |  Picture / Format |  Instant Skip |  Vol+ |
|  Zoom |  Zoom / Size |  Easy Navi |  Smart / List |
|  Timesleep |  Sleep / Timer |  Channel+ |  CH+ / Page+ |





| Original | Replacement |
|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|  Instant Replay |  Vol- |
|  Library |  Display / Media |
|  Channel- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10 |  Guide / EPG / -/-- |
|  0 |  0 |
|  Remain |  Fav / Marker / PC |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |

| Original | Replacement |
|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Rec Mode |  Shift + Rec / Rec Mode |
|  <I Slow |  Shift + << / |
|  Slow I> |  Shift + >> / |
|  II< Frame/Adjust |  Shift + I<< / Preset- |
|  Frame/Adjust >II |  Shift + >>I / Preset+ |
|  Time Bar |  Shift + Sleep / Timer |
|  Top Menu |  Shift + D.Menu / Top Menu |
|  Setup |  Shift + Setup / OPT / Tools |
|  Edit Menu |  Shift + Menu / |
|  Delete |  Shift + Exit / Cancel / Clear |
|  Display |  Shift + Display / Media |
|  DVD |  Shift + 2 |
|  HDD |  Shift + 7 |
|  T.Search |  Shift + Red / Netflix / |

