



| Original | Replacement |
|----------|-----------------------|
| | Power |
| | Vol+ |
| | Vol- |
| | Home |
| | CH+ / Page+ |
| | CH- / Page- |
| | Guide / EPG / -/-- |
| | AV / Input / RDS |
| | Back / Return |
| | Exit / Cancel / Clear |
| | OK |
| | Up |
| | Down |
| | Right |
| | Left |
| | Play / Slow |
| | Stop / Hold |

| Original | Replacement |
|----------|------------------------|
| | Display / Media |
| | 1 |
| | TV/Radio / |
| | Red / Netflix / Search |
| | Fav / Marker / PC |

