









 

 

 
 
 
 

 
 
 
 
 
 


 
 



 
 



 
 
 
 


 
 
 
 
 
 
 
 



 







 
 





 


 
 

 
 

 
 




 
 
 


 

 
 

 





 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV
 Mute	 Mute	 DVD	 DVD
 10+	 10+	 SAT	 SAT
 SUBTL	 SUBTL	 AUX	AUX
 EPG	 EPG	 PLAY MODE	 PLAY MODE
 Menu	 Menu	 II	 II
 Vol +	 Vol +	 ■	 ■
 Vol -	 Vol -	 >>>	 >>>
 10+	 10+	 <<<	 <<<
 SUBTL	 SUBTL	 ●	 ●
 EPG	 EPG	 DISC NAV	 DISC NAV
 Menu	 Menu	 SOUND	 SOUND
 Vol +	 Vol +	 AD	 AD
 Vol -	 Vol -	 SETTINGS	SETTINGS
 10+	 10+	 LIST	 LIST
 SUBTL	 SUBTL	 DUAL	 DUAL
 EPG	 EPG	 SUBT	 SUBT
Menu	Menu	 OPT	OPT
Vol +	Vol +	 PROG	 PROG
Vol -	Vol -	 SEARCH	 SEARCH
10+	10+	 PICTURE	 PICTURE
SUBTL	SUBTL	 ECO	ECO
EPG	EPG	 SLEEP	 SLEEP
Menu	Menu	 TV/R	 TV/R
Vol +	Vol +	 FORMAT	 FORMAT
Vol -	Vol -	 3D	3D
10+	10+	 E-MANUAL	 E-MANUAL
SUBTL	SUBTL	 REPEAT	 REPEAT
EPG	EPG	 ZOOM	 ZOOM
Menu	Menu	 TIMER	TIMER
Vol +	Vol +	 D.MENU	 D.MENU
Vol -	Vol -	 TEXT	 TEXT
10+	10+	 ▲	 ▲
SUBTL	SUBTL	 AV	AV
EPG	EPG	 TOP MENU	 TOP MENU
Menu	Menu	 DISPLAY INFO	 DISPLAY INFO
Vol +	Vol +	 MENU	 MENU
Vol -	Vol -	 OK	 OK
10+	10+	 CLEAR	 CLEAR
SUBTL	SUBTL	 EXIT	 EXIT
EPG	EPG	 RETURN BACK	 RETURN BACK
Menu	Menu	 HOME	 HOME
Vol +	Vol +	 SMART	 SMART
Vol -	Vol -	 APP MEDIA	 APP MEDIA
10+	10+	 + VOL	 + VOL
SUBTL	SUBTL	 + CH	 + CH
EPG	EPG	 1	 1
Menu	Menu	 2	 2
Vol +	Vol +	 3	 3
Vol -	Vol -	 4	 4
10+	10+	 5	 5
SUBTL	SUBTL	 6	 6
EPG	EPG	 7	 7
Menu	Menu	 8	 8
Vol +	Vol +	 9	 9
Vol -	Vol -	0	0
10+	10+	GUIDE	GUIDE
SUBTL	SUBTL	PRE-CH	PRE-CH
EPG	EPG	A	A
Menu	Menu	B	B
Vol +	Vol +	C	C



Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

