











 






































 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 1	 1
 2	 2
 3	 3
 Audio	 Audio / Lang I/II
 OSD	 Display / Media
 4	 4
 5	 5
 6	 6
 Setup	 Setup / OPT /
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ

Original	Replacement
 Program	 TV/Radio /
 0/10	 0
 10+	 Guide / EPG / -/-
 Time	 Shift + Sleep / Timer
 Title	 Sound / Title
 Step/RDS	 Text / Goto
 Repeat	 Green / APP / Repeat
 Zoom	 Zoom / Size
 A-B	 Yellow / YouTube / Repeat
 P.EQ	 AV / Input / RDS
 Darkness	 Back / Return
 Loudness	 Smart / List
 S-Bass	 Picture / Format
 <</TU-	 << / Tune-
 Vol-	 Vol-
 Vol+	 Vol+
 >>/TU+	 >> / Tune+





Original	Replacement	Original	Replacement
I<</CH-	I<< / Preset-		
>>I/CH+	>>I / Preset+		
Clock	D.Menu / Top		
Play	Play / Slow		
Pause/ST/MO.	Pause / Step / Freeze		
Stop/Memory	Stop / Hold		
Sleep	Sleep / Timer		
Up	Up		
Left	Left		
Enter	OK		
Right	Right		
Down	Down		
Band/Tuner	Shift + 6		
N/P/DVD	Shift + 2		
AUX1	Shift + 1		
AUX2	Shift + 3		

