


 
 

 



 





 




 

 










 

 



 







 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop





Original	Replacement	Original	Replacement
 << / Tune -	 <<	 AUX Pause	 Shift + Pause
 >> / Tune +	 >>	 AUX Play	 Shift + Play
 I<< / Preset -	 I<<	 AUX Stop	 Shift + Stop
 >>I / Preset +	 >>I	 AUX <<	 Shift + <<
 7CH Dir	 ECO 3D	 AUX >>	 Shift + >>
 1 / Tuner	 1	 AUX >>I	 Shift + >>I
 2 / CD	 2	 AUX I<<	 Shift + I<<
 3 / AUX	 3		
 4 / Tape	 4		
 5	 5		
 6 / Video 1	 6		
 7 / Video 2	 7		
 8 / Video 3	 8		
 9	 9		
 0	 0		
 AUX Power /	 Shift + Power		
 AUX Rec	 Shift + Rec		





Original	Replacement	Original	Replacement
 AUDIO	 Red	 TV 3	 3
 CD	 Green	 TV 4	 4
 AUX	 Yellow	 TV 5	 5
 TV	 Blue	 TV 6	 6
 VCR	 Shift + Red	 TV 7	 7
 DVD	 Shift + Green	 TV 8	 8
 CABLE	 Shift + Yellow	 TV 9	 9
 SAT	 Shift + Blue	 TV 0	 0
 TV Power	 Power	 CABLE Power	 Shift + Power
 TV CH +	 Ch +	 CABLE CH/Level +	 Shift + Ch +
 TV CH -	 Ch -	 CABLE CH/Level -	 Shift + Ch -
 TV CH Sel.	 Media	 CABLE CH Sel.	 Shift + Smart
 TV Mute	 Mute	 CABLE Mute	 Shift + Mute
 TV Volume +	 Vol +	 CABLE Volume	 Shift + Vol +
 TV Volume -	 Vol -	 CABLE Volume -	 Shift + Vol -
 TV 1	 1	 CABLE 1	 Shift + 1
 TV 2	 2	 CABLE 2	 Shift + 2




 









 













 
 
 
 

 
 

 

 

 

 

 

 





 









 










	Original	Replacement	
	CABLE 3	+ Shift + 3	
	CABLE 4	+ Shift + 4	
	CABLE 5	+ Shift + 5	
	CABLE 6	+ Shift + 6	
	CABLE 7	+ Shift + 7	
	CABLE 8	+ Shift + 8	
	CABLE 9	+ Shift + 9	
	CABLE 0	+ Shift + 0	

Original	Replacement







Original	Replacement	Original	Replacement
 AUDIO	 Red	 DVD Right	 Right
 CD	 Green	 DVD Down	 Down
 AUX	 Yellow	 DVD Display	 Info
 TV	 Blue	 DVD Pause	 Pause
 VCR	 Shift + Red	 DVD Play	 Play
 DVD	 Shift + Green	 DVD Stop	 Stop
 SAT	 Shift + Blue	 DVD <<	 <<
 CABLE	 Shift + Yellow	 DVD >>	 >>
 DVD Power	 Power	 DVD I<<	 I<<
 DVD Menu	 Menu	 DVD >>I	 >>I
 DVD Audio Sel.	 Dual	 DVD 1	 1
 DVD Subtitle	 Subt	 DVD 2	 2
 DVD Zoom	 3D	 DVD 3	 3
 DVD OSD /	 Format	 DVD 4	 4
 DVD Up	 Up	 DVD 5	 5
 DVD Left	 Left	 DVD 6	 6
 DVD Enter	 Ok	 DVD 7	 7





 

 
 
 




 
 
 

 
 


 



 
 

 











 


 










 



 



 





	Original	Replacement		Original	Replacement
	DVD 8	 8			 +  Shift + 8
	DVD 9	 9			 +  Shift + 9
	DVD 0	 0			 +  Shift + 0
	SAT Power	 +  Shift + Power			
	SAT CH +	 +  Shift + Ch +			
	SAT CH -	 +  Shift + Ch -			
	SAT CH Sel.	 +  Shift + Media			
	SAT Mute	 +  Shift + Mute			
	SAT Volume +	 +  Shift + Vol +			
	SAT Volume -	 +  Shift + Vol -			
	SAT 1	 +  Shift + 1			
	SAT 2	 +  Shift + 2			
	SAT 3	 +  Shift + 3			
	SAT 4	 +  Shift + 4			
	SAT 5	 +  Shift + 5			
	SAT 6	 +  Shift + 6			
	SAT 7	 +  Shift + 7			





Original	Replacement	Original	Replacement
 AUDIO	 Red	 CD 5	 5
 CD	 Green	 CD 6	 6
 AUX	 Yellow	 CD 7	 7
 TV	 Blue	 CD 8	 8
 VCR	 Shift + Red	 CD 9	 9
 SAT	 Shift + Blue	 CD 0	 0
 CABLE	 Shift + Yellow	 VCR Power	 Shift + Power
 DVD	 Shift + Green	 VCR CH Sel.	 Shift + Media
 CD Pause	 Pause	 VCR Rec	 Shift + Rec
 CD Play	 Play	 VCR Play	 Shift + Play
 CD Stop	 Stop	 VCR Mute	 Shift + Mute
 CD I<<	 I<<	 VCR >>	 Shift + >>
 CD >>I	 >>I	 VCR <<	 Shift + <<
 CD 1	 1	 VCR Volume -	 Shift + Vol -
 CD 2	 2	 VCR Volume +	 Shift + Vol +
 CD 3	 3	 VCR CH+	 Shift + Ch +
 CD 4	 4	 VCR CH-	 Shift + Ch -





Original	Replacement	Original	Replacement
	SHIFT +		
VCR Pause	Shift + Pause		
	SHIFT +		
VCR Stop	Shift + Stop		
	SHIFT +		
VCR 1	Shift + 1		
	SHIFT +		
VCR 2	Shift + 2		
	SHIFT +		
VCR 3	Shift + 3		
	SHIFT +		
VCR 4	Shift + 4		
	SHIFT +		
VCR 5	Shift + 5		
	SHIFT +		
VCR 6	Shift + 6		
	SHIFT +		
VCR 7	Shift + 7		
	SHIFT +		
VCR 8	Shift + 8		
	SHIFT +		
VCR 9	Shift + 9		
	SHIFT +		
VCR 0	Shift + 0		

