



Original		Replacement		Original		Replacement	
	Input		AV / Input / RDS		OK		OK
	Power		Power		Right		Right
	Amazon		Blue / Prime Video / Random		Down		Down
	Netflix		Red / Netflix / Search		Back		Back / Return
	iHeart Radio		Setup / OPT /		Guide		Guide / EPG / -/-
	<<		<< / Tune-		Vol+		Vol+
	Pause		Pause / Step / Freeze		V		Display / Media
	Play		Play / Slow		CH+		CH+ / Page+
	>>		>> / Tune+		Vol-		Vol-
	CC		Subtitle / EQ		CH-		CH- / Page-
	Rec		Rec / Rec Mode		Mute		Mute / Dimmer
	Stop		Stop / Hold		[]		Zoom / Size
	Menu		Menu / Home		PIC		Picture / Format
	Exit		Exit / Cancel / Clear		Recall		Fav / Marker / PC
	Info		Info / Angle		1		1
	Up		Up		2		2
	Left		Left		3		3





Original		Replacement		Original		Replacement	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
ENTER	Enter	LIST SMART	Smart / List				
0	0	HDMI - BAT 0	0				
--	--	GOTO TEXT	Text / Goto				

