



Original	Replacement	Original	Replacement
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [ ≡ ]	 Text / Goto





Original

Replacement

	[≡⊕]		Subtitle / EQ
	[ / ≡ ]		Picture / Format
	[≡X]		Exit / Cancel / Clear
	[≡↕]		Zoom / Size
	[≡?]		Display / Media
	[≡i]		Smart / List

Original

Replacement






Original	Replacement	Original	Replacement
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+







































Original	Replacement	Original	Replacement
	⏮️		⏮️ / Preset-
	⏭️		⏭️ / Preset+
	▶️/⏸️		Play / Slow
	⏸️		Pause / Step / Freeze
	■		Stop / Hold
	Title		Sound / Title
	Open / Close		Eject / Surround





Original	Replacement	Original	Replacement
On/Off	 Power		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Tone+	 >> / Tune+		
Lang	 Sound / Title		
Menu audio	 Audio / Lang I/II		
Subt.List	 Subtitle / EQ		
Txt Expand	 Zoom / Size		
Sleep Timer	 Sleep / Timer		
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Menu	 Menu / Home		
Menu Up	 Up		
Info	 Info / Angle		
Menu Left	 Left		
OK Enter	 OK		

Original	Replacement	Original	Replacement
Menu Right	 Right		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 +  Shift + Audio / Lang I/II		

Original	Replacement

