



| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Standby/On   |  Power             |  P+          |  CH+ / Page+             |
|  1            |  1                 |  Up          |  Up                      |
|  2            |  2                 |  CL/Clear    |  Exit / Cancel / Clear   |
|  3            |  3                 |  Left        |  Left                    |
|  4            |  4                 |  Vol-        |  Vol-                    |
|  5            |  5                 |  OK          |  OK                      |
|  6            |  6                 |  Right       |  Right                   |
|  7            |  7                 |  Vol+        |  Vol+                    |
|  8            |  8                 |  >I/Index    |  >>I / Preset+           |
|  9           |  9                |  P-         |  CH- / Page-            |
|  0          |  0               |  Down      |  Down                  |
|  Child Lock |  Setup / OPT /   |  >I</Still |  Pause / Step / Freeze |
|  Monitor    |  Display / Media |  <<        |  << / Tune-            |
|  Select     |  Smart / List    |  Stop      |  Stop / Hold           |
|  Timer      |  Sleep / Timer   |  Play      |  Play / Slow           |
|  Record     |  Rec / Rec Mode  |  >>        |  >> / Tune+            |
|  Menu       |  Menu / Home     |   |   |

