 


 
 






 









 





 

 






 
 
 

 
 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide
 Mute	 Mute	 Menu	 Menu
 Red	 Red	 Info	 Info
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Left	 Left
 Blue	 Blue	 OK	 Ok
 <<	 <<	 Right	 Right
 >>	 >>	 Down	 Down
 I<<	 I<<	 FAV	 Pre Ch
 >>I	 >>I	 Exit	 Exit
 Play	 Play	 Vol+	 Vol +
 Pause	 Pause	 Vol-	 Vol -
 Stop	 Stop	 Rec	 Rec
 Media	 Media	 USB	 Smart
 Subtitle	 Subt	 USB	 AV
 TTX	 Text	 CH+	 Ch +
 Audio	 Dual	 CH-	 Ch -





	Original	Replacement		Original	Replacement
		1			1
		2			2
		3			3
		4			4
		5			5
		6			6
		7			7
		8			8
		9			9
		0			0
		Back			Back
		TV/Radio			TV/R

	Original	Replacement

