 

 

 


 

 


 
 


 




 






 


 

 






 












 
 
 


 
 
 

 

 



 






	Original	Replacement		Original	Replacement
	Power		Power		>>
	Tv/HMR		TV/R		Rec
	1		1		Source
	2		2		Vol +
	3		3		Vol -
	4		4		→/CM Skip
	5		5		←/INS Replay
	6		6		Pause/Step
	7		7		Stop
	8		8		Play
	9		9		I>/Slow
	0		0		Return
	Goto		Pre Ch		Home/Guide
	Mute		Mute		Display
	I<<		I<<		HDD
	>>I		>>I		USB
	<<		<<		LAN





	Original	Replacement		Original	Replacement
	DV	 D	Blue		
	Audio	 SOUND DUAL	Dual		
	Subtitle	 AD SUBT	Subt		
	Repeat	 REPEAT TEXT	Text		
	A-B	 SHIFT +  PLAY MODE	Shift + Play		
	Zoom	 ZOOM	Eject		
	Edit	 SETTINGS OPT	Options		
	Timeshift	 ECO 3D	3D		
	Tv System	 TOP MENU MENU	Menu		
	Enter	 OK	Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		

