

 

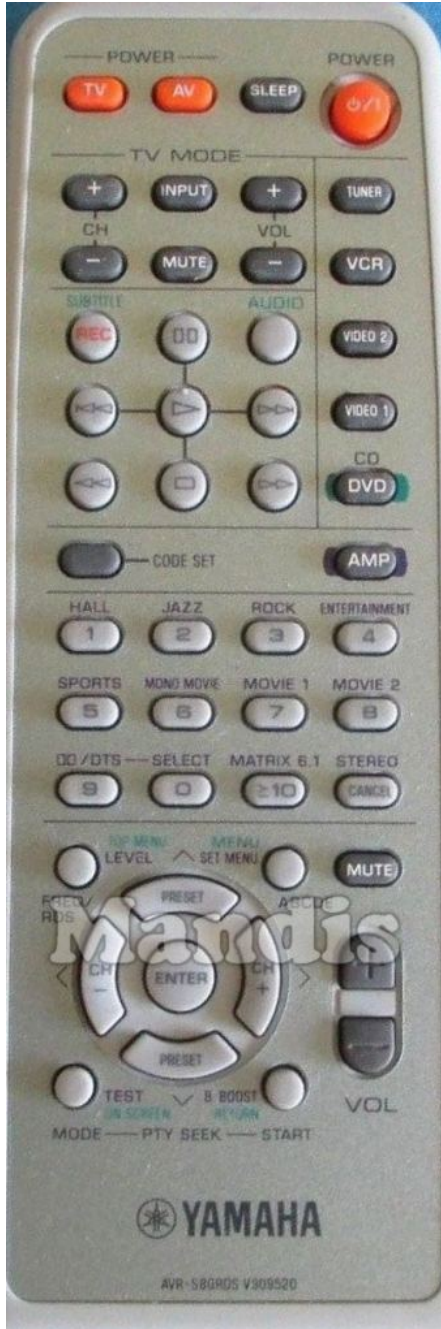


Original	Replacement
 Power Tv	 Shift + Power
 Sleep	 Sleep / Timer
 Power	 Power
 Tv CH+	 Shift + CH+ /
 Tv Input	 Shift + AV / Input / RDS
 Tv Input	 AV / Input / RDS
 Tv Vol+	 Shift + Vol+
 Tuner	 TV/Radio /
 Tuner	 Shift + 6
 Tv CH-	 Shift + CH- /
 Tv Mute	 Shift + Mute / Dimmer
 Tv Vol-	 Shift + Vol-
 VCR	 Shift + 1
 Pause	 Pause / Step / Freeze
 Video 2	 Shift + 5
 I<<	 I<< / Preset-
 Play	 Play / Slow

Original	Replacement
 >>I	 >>I / Preset+
 Video 1	 Shift + 4
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 DVD/CD	 Shift + 2
 DVD/CD	 Shift + 3
 1/Hall	 1
 2/Jazz	 2
 3/Rock	 3
 4/Entertainment	 4
 5/Sports	 5
 6/Mono Movie	 6
 7/Movie 1	 7
 8/Movie 2	 8
 9/00/DTS	 9
 0/Select	 0










 


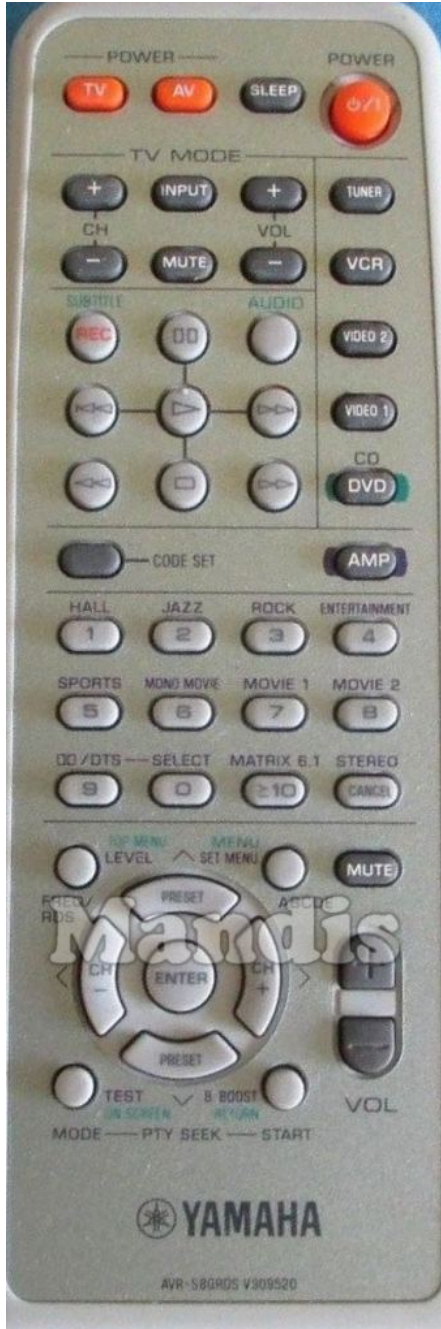












 

 

 











 



Original	Replacement
+10/Matrix 6.1	Guide / EPG / -/--
Stereo	Audio / Lang I/II
Level/Freq	D.Menu / Top
Set Menu	Menu / Home
Mute	Mute / Dimmer
Up / Preset Up	Shift + >>1 / Preset+
Up / Preset Up	Up
CH-/Left	Left
CH-/Left	CH- / Page-
Enter	OK
CH+/Right	Right
CH+/Right	CH+ / Page+
Vol+	Vol+
Down / Preset	Shift + I<< / Preset-
Down / Preset	Down
Vol-	Vol-
Test	Text / Goto

Original	Replacement
B.Boost	Smart / List





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Tuner	 TV/Radio /	 TUNER PTY Seek	 Smart / List
 Tuner	 Shift + 6 6	 TUNER PTY Seek Start	 Display / Media
 TUNER 1	 1		
 TUNER 2	 2		
 TUNER 3	 3		
 TUNER 4	 4		
 TUNER 5	 5		
 TUNER 6	 6		
 TUNER 7	 7		
 TUNER 8	 8		
 TUNER RDS	 Info / Angle		
 TUNER ABCDE	 OK		
 Mute	 Mute / Dimmer		
 TUNER Preset	 >>I / Preset+		
 Vol+	 Vol+		
 TUNER Preset	 I<< / Preset-		



Down