








 

 

 
 

 


 
 




 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop/A/B/C/D/E	 Stop
 <</Preset	 <<
 >>/Preset Up	 >>
 >>I/PTY SEEK	 >>I
 I<</Freq/RDS	 I<<
 Play/PTY SEEK	 Play

Original	Replacement
 Pause	 Pause
 Sleep	 Sleep
 On screen	 Info
 Menu	 Menu
 Set Menu	 D. Menu
 VCR	 Green
 Video	 Yellow
 DVD/CD	 Blue
 Tuner	 Red
 Status	 Media
 Return	 Back
 Test	 Guide
 Mute	 Mute
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right/CH+	 Right

 




	Original	Replacement
	Left/CH-	 Left
	Volume+	 Vol +
	Volume-	 Vol -
	Music	 3D
	Game	 AV
	Sports	 Eject
	Movie	 Format
	[oo]/DTS	 Shift + Dual
	Select	 List
	Matrix 6.1	 Smart
	Stereo	 Options
	Night	 Shift + 5
	SW+	 Shift + 7
	Center+	 Shift + 8
	SURR+	 Shift + 9
	SURR-	 Shift + Pre Ch
	SW-	 Shift + Guide

 
	Original	Replacement
	Center-	 Shift + 0
	Angle	 Pre Ch
	Audio	 Dual
	Subtitle	 Subt
	Repeat	 Text
	A-B	 TV/R



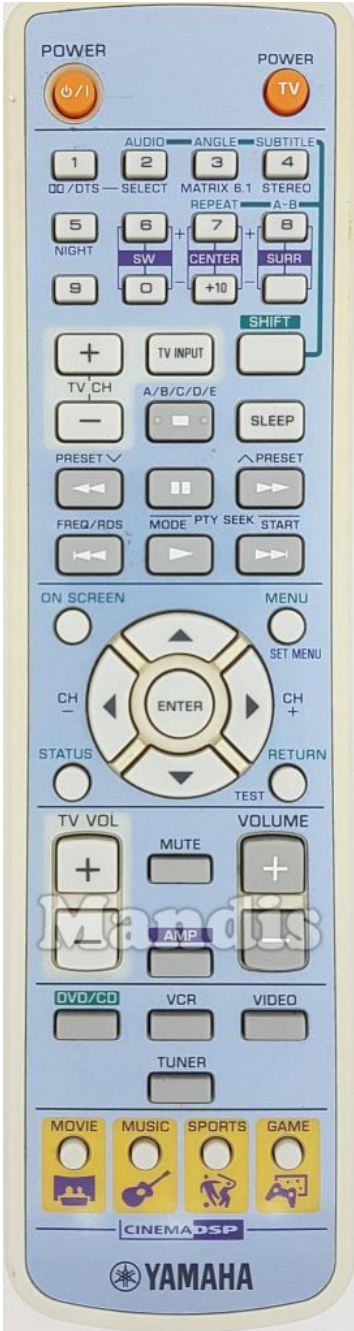

Original		Replacement		Original		Replacement	
	Power Tv		Power				
	Tv CH+		Ch +				
	Tv CH-		Ch -				
	Tv Input		AV				
	Tv Vol+		Vol +				
	Tv Vol-		Vol -				



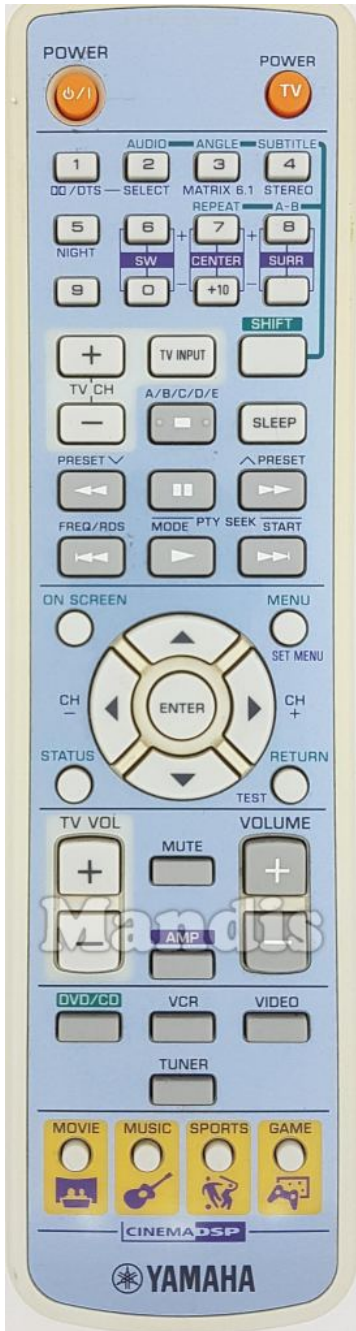

Original	Replacement
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	Stop/A/B/C/D/E
	<</Preset
	>>/Preset Up
	I<<
	Play
	>>I
	Volume+
	Volume-

Original	Replacement
	Mute
	Blue
	Green
	Yellow
	Red

