






















 






 







| Original   | Replacement  |
|--|--|
|  Standby      |  Shift + Power              |
|  System Power |  Power                      |
|  CD           |  Shift + 3                  |
|  MD / CD-R    |  Shift + TV/Radio / Program |
|  TUNER        |  Shift + 6                  |
|  Sleep        |  Sleep / Timer              |
|  DVD          |  Shift + 2                  |
|  DTV/CBL      |  Back / Return              |
|  V-AUX        |  Shift + 7                  |
|  Multi CH In  |  Shift + Smart / List       |
|  VCR         |  Shift + 4                 |
|  Volume+    |  Vol+                     |
|  Volume-    |  Vol-                     |
|  Mute       |  Mute / Dimmer            |
|  Stereo     |  Shift + 1                |
|  1          |  1                        |
|  2          |  2                        |

| Original  | Replacement   |
|---|---|
|  HALL        |  Shift + Display / Media |
|  3           |  3                       |
|  Jazz        |  Zoom / Size             |
|  4           |  4                       |
|  Rock        |  Picture / Format        |
|  Music       |  Smart / List            |
|  5           |  5                       |
|  Entertain   |  D.Menu / Top            |
|  6           |  6                       |
|  7           |  7                       |
|  TV Thtr    |  TV/Radio /             |
|  Movie     |  Display / Media       |
|  8         |  8                     |
|  Dolby DTS |  Sound / Title         |
|  9         |  9                     |
|  Night     |  Info / Angle          |
|  0         |  0                     |





| Original | Replacement       | Original | Replacement               |
|----------|-------------------|----------|---------------------------|
|          | EX/ES             |          | AV / Input / RDS          |
|          | Straight / Effect |          | Text / Goto               |
|          | Level             |          | Menu / Home               |
|          | Preset/CH+        |          | CH+ / Page+               |
|          | Up                |          | Up                        |
|          | Set Menu          |          | Setup / OPT /             |
|          | A/B/C/D/E         |          | Yellow / YouTube / Repeat |
|          | Left              |          | Left                      |
|          | Enter             |          | OK                        |
|          | Select            |          | Shift + OK                |
|          | Right             |          | Right                     |
|          | Preset/CH-        |          | CH- / Page-               |
|          | Down              |          | Down                      |
|          |                   |          |                           |
|          |                   |          |                           |
|          |                   |          |                           |
|          |                   |          |                           |
|          |                   |          |                           |
|          |                   |          |                           |

