



Original	Replacement	Original	Replacement
Standby	Power	Tv/Radio	TV/R
Source	AV	Display	Info
1	1	Up	Up
2	2	Down	Down
3	3	Right	Right
4	4	Left	Left
5	5	Ok	Ok
6	6	Menu	Menu
7	7	Exit	Exit
8	8	Vol+	Vol +
9	9	Vol-	Vol -
0	0	Mute	Mute
Fav	Pre Ch	Epg	Guide
Recall	Back	Media	Media
P.Mode	Format	Ch+	Ch +
S.Mode	Shift + Dual	Ch-	Ch -
Sleep	Sleep	Rec	Rec





Original		Replacement		Original		Replacement	
	T.Shift		Options		Green		Green
	I/II Audio		Dual		Yellow		Yellow
	Size/Aspect		3D		Blue		Blue
	Text		Text				
	Reveal		D. Menu				
	Subpage		Smart				
	Hold		Eject				
	Subtitle		Subt				
	Index/Rec List		List				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Red		Red				

