 


 
 



 

 
 
 

 



 
 
 

 


 


 
 
 






 


 
 
 


 
 

 
 
 

 

 



 
 

 
 
 

 
 
 

 

 


Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Text	 Text
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Replacement
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Display	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original	Replacement	Original	Replacement
 Exit	 Exit	 Timeshift	 Options
 Subtitle	 Subt	 Tv/Radio	 TV/R
 Index	 List		
 Size	 Format		
 Reveal	 D. Menu		
 Play/Hold	 Play		
 Pause	 Pause		
 I<</Cancel	 I<<		
 >>I/Subpage	 >>I		
 Stop	 Stop		
 Rec	 Rec		
 FAV	 Pre Ch		
 <</FAV-	 <<		
 >>/FAV+	 >>		
 Mix	 Smart		
 EPG	 Guide		
 Media	 Media		

