 


 





 


 


 
 







 


 






 






















 













 
 
 





 







	Original	Replacement		Original	Replacement
	Power		Power		-/--/+10
	Mute		Mute		Swap/Prog
	Source		AV		Tv Menu
	P.Mode		Shift + Format		Exit
	S.Mode		Shift + Dual		Goto/Text
	I/II/Audio		Dual		Display
	Sleep		Sleep		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Enter
	5		5		Vol+
	6		6		Vol-
	7		7		PR+
	8		8		PR-
	9		9		Red/D.Setup
	0		0		Green/A-B
					Guide
					Pre Ch
					Menu
					Exit
					Text
					Info
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Ch +
					Ch -
					Red
					Green





Original		Replacement		Original		Replacement	
	Yellow/Angle		Yellow		Recorder		Rec
	Blue/Repeat		Blue		TV/Radio		TV/R
	Subtitle		Subt				
	Play		Play				
	Pause/Hold		Pause				
	Size		Format				
	D.Disc/Reveal		List				
	D.Menu/Mix		D. Menu				
	Zoom/TXT		Shift + Eject				
	I<</Subpage		I<<				
	>>I/Lang		>>I				
	Stop/FAV-		Stop				
	<</FAV		<<				
	>>/FAV+		>>				
	Eject/EPG		Eject				
	USB/SD		Smart				
	Still		Options				

