 



 





 

 

 



 

 

 





 



 











 



 



 



 



 






 










 







 

 




 

 







Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/--
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear







Original	Replacement
 i	 ANGLE INFO Info / Angle
 SETUP FAV FAV/Setup	 PC FAV MARKER Fav / Marker / PC
 SETUP FAV FAV/Setup	 OPT-TOOLS SETUP Setup / OPT /
 ANGLE TV.RD Tv/RD/Angle	 SHIFT + ANGLE INFO Shift + Info / Angle
 ANGLE TV.RD Tv/RD/Angle	 PROGRAM TV/RADIO TV/Radio /
 AD AD	 LANG I/I AUDIO Audio / Lang I/I
 MENU TEXT Text/Menu	 GOTO TEXT Text / Goto
 MENU TEXT Text/Menu	 TOP MENU D.MENU D.Menu / Top
 ↑	 SHIFT + ↑ Shift + Up
 S S	 MEDIA DISPLAY Display / Media
 ZOOM Zoom / Rec	 SIZE ZOOM Zoom / Size
 ZOOM Zoom / Rec	 REC MODE Rec / Rec Mode
 ←/Cancel	 SHIFT + ← Shift + Left
 ←/Cancel	 SHIFT + CLEAR EXIT CANCEL Shift + Exit / Cancel / Clear
 MIX OK OK/Mix	 SHIFT + OK Shift + OK
 →/Size	 SHIFT + → Shift + Right
 →/Size	 SHIFT + SIZE ZOOM Shift + Zoom / Size

Original	Replacement
 Stop	 HOLD Stop / Hold
 Eject	 SURROUND Eject / Surround
 ↓	 SHIFT + ↓ Shift + Down
 Play	 SLOW Play / Slow
 STEP II Pause/Step	 STEP-FREEZE II Pause / Step / Freeze
 HOLD I<</Hold	 PRESET- I<< / Preset-
 HOLD I<</Hold	 SHIFT + HOLD Shift + Stop /
 REVEAL >>/Reveal	 PRESET+ >>/Preset+
 SUBPAGE <</Subpage	 TUNE- << / Tune-
 INDEX >>/Index	 TUNE+ >> / Tune+
 GOTO Red/Goto	 SHIFT + GOTO TEXT Shift + Text /
 GOTO Red/Goto	 NETFLIX SEARCH Red / Netflix / Search
 SLOW Green/Slow	 APP REPEAT Green / APP / Repeat
 SLOW Green/Slow	 SHIFT + SLOW Shift + Play /
 REPEAT Yellow/Repeat	 SHIFT + APP REPEAT Shift + Green / APP /
 REPEAT Yellow/Repeat	 REPEAT A-B YouTube REPEAT A-B Yellow / YouTube / Repeat
 A-B Blue/A-B	 SHIFT + REPEAT A-B YouTube REPEAT A-B Shift + Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Blue/A-B	 Blue / Prime Video / Random		

