






 

 











 
 

 



 



 










Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	Recall / Mouse		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam / A2		Audio / Lang I/II
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH +		CH+ / Page+
	Vol +		Vol+
	Info		Info / Angle
	CH -		CH- / Page-
	Vol -		Vol-
	Home		Shift + Menu /
	FAV		Fav / Marker / PC
	Settings		Setup / OPT /
	ASP		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Replacement
 Exit	 Exit / Cancel / Clear
 I<< / Text	 Text / Goto
 I<< / Text	 I<< / Preset-
 >>I / Subpage	 >>I / Preset+
 << / Size	 << / Tune-
 >> / Reveal	 >> / Tune+
 Play/Pause / Index	 Play / Slow
 Stop / Hold	 Stop / Hold
 Cancel	 Shift + Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Repeat	 Shift + Green / APP /
 Freeze	 Pause / Step / Freeze
 A - B	 Shift + Yellow / YouTube /
 Media	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random

