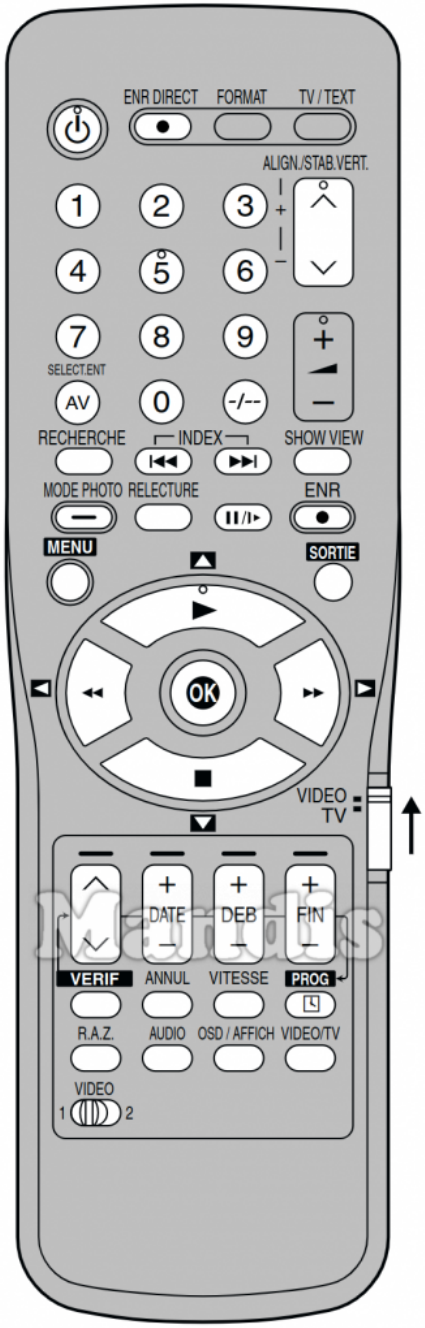

Original		Replacement	
Power		Power	
Enr Direct		SHIFT + REC MODE	Shift + Rec / Rec Mode
Format		FORMAT PICTURE	Picture / Format
Tv/Text		GOTO TEXT	Text / Goto
1		TV 1	1
2		DVD 2	2
3		CD - STB 3	3
Align / Stab. Vert. +		CH PAGE +	CH+ / Page+
4		VIDEO 4	4
5		TAPE 5	5
6		TUNER 6	6
Align / Stab. Ver		CH PAGE −	CH- / Page-
7		AUX - HDD 7	7
8		USB 8	8
9		BLUETOOTH 9	9
Vol +		VOL +	Vol +
AV / Select En		RDS AV INPUT	AV / Input / RDS

Original		Replacement	
0		HDMI - SAT 0	0
-/--		-/-- GUIDE EPG	Guide / EPG / -/--
Vol -		VOL −	Vol -
Recherche		NETFLIX SEARCH	Red / Netflix / Search
I << Index		PRESET-	I << / Preset-
Index >>I		PRESET+	>>I / Preset+
ShowView		ANGLE INFO	Info / Angle
Mode Photo		LIST SMART	Smart / List
Relecture		RETURN BACK	Back / Return
Pause/Step		STEP - FREEZE	Pause / Step / Freeze
Enr		REC MODE	Rec / Rec Mode
Menu		HOME MENU	Menu / Home
Up			Up
Play		SLOW	Play / Slow
Sortie		CLEAR EXIT CANCEL	Exit / Cancel / Clear
Left			Left
<<		TUNE-	<< / Tune-

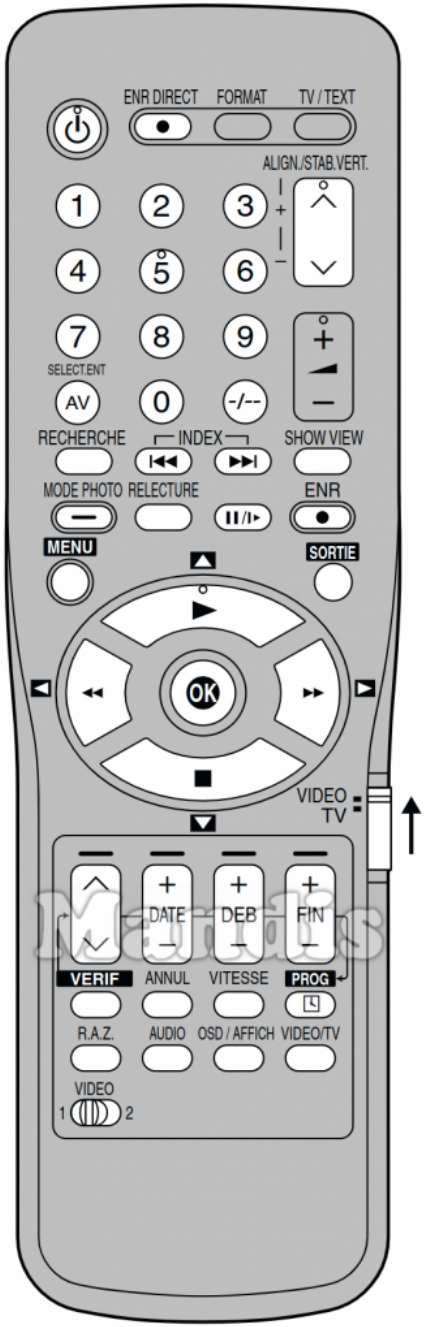

Original		Replacement	
OK	OK	OK	OK
Right	Right	Right	Right
>>	>>	TUNE+	>> / Tune+
Down	Down	Down	Down
Stop	Stop	HOLD	Stop / Hold
Verif Up	Verif Up	SHIFT +	Shift + Up
Date+	Date+	SHIFT +	Shift + Right
Deb+	Deb+	SHIFT + VOL	Shift + Vol +
Fin+	Fin+	SHIFT + CH PAGE	Shift + CH+ /
Verif Down	Verif Down	SHIFT +	Shift + Down
DATE -	Date-	SHIFT +	Shift + Left
DEB -	Deb-	SHIFT + VOL -	Shift + Vol -
FIN -	Fin-	SHIFT + CH PAGE -	Shift + CH- /
VERIF	Verif	PROGRAM TV/RADIO	TV/Radio /
ANNUL	Annul	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
VITESSE	SP/LP/EP	OPT-TOOLS SETUP	Setup / OPT /
PROG	Prog	TIMER SLEEP	Sleep / Timer

Original		Replacement	
R.A.Z.	I-Timer	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
OSD / AFFICH	OSD/Affich	MEDIA DISPLAY	Display / Media
VIDEO/TV	Reset	APP REPEAT	Green / APP / Repeat

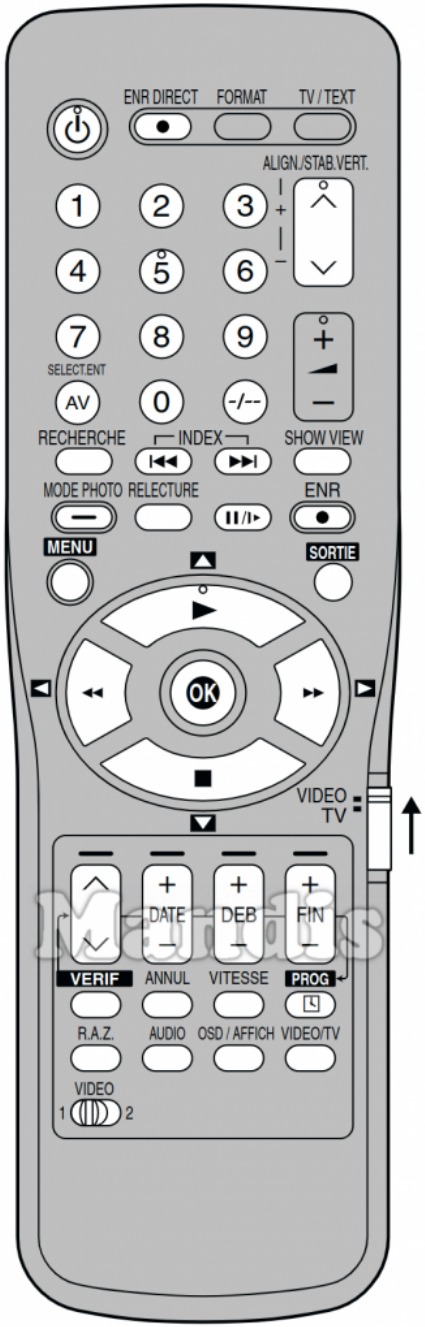

Original		Replacement	
	Power		Power
ENR DIRECT	Enr Direct	PROGRAM TV/RADIO	TV/Radio /
FORMAT	Format	SIZE ZOOM	Zoom / Size
TV / TEXT	Tv/Text	GOTO TEXT	Text / Goto
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
ALIGN./STAB.VERT.	Align/Stab. Vert	CH PAGE +	CH+ / Page+
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
	Align/Stab. Vert	CH PAGE −	CH- / Page-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
	Volume+	VOL +	Vol +
SELECT.ENT AV	AV/Select Ent	RDS AV INPUT	AV / Input / RDS

Original		Replacement	
0	0	HDMI - SAT 0	0
-/--	-/--	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
	Volume-	VOL −	Vol -
RECHERCHE	Recherche	NETFLIX SEARCH	Red / Netflix / Search
INDEX	I<< Index	PRESET-	I<< / Preset-
INDEX	Index >>I	PRESET+	>>I / Preset+
SHOW VIEW	Show View	FORMAT PICTURE	Picture / Format
MODE PHOTO	Mode Photo	OPT-TOOLS SETUP	Setup / OPT /
RELECTURE	Relecture	MEDIA DISPLAY	Display / Media
	Pause/Step	STEP - FREEZE	Pause / Step / Freeze
ENR	Enr	REC MODE	Rec / Rec Mode
MENU	Menu	HOME MENU	Menu / Home
	Play	SLOW	Play / Slow
	Up		Up
SORTIE	Sortie	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	<<	TUNE-	<< / Tune-
	Left		Left

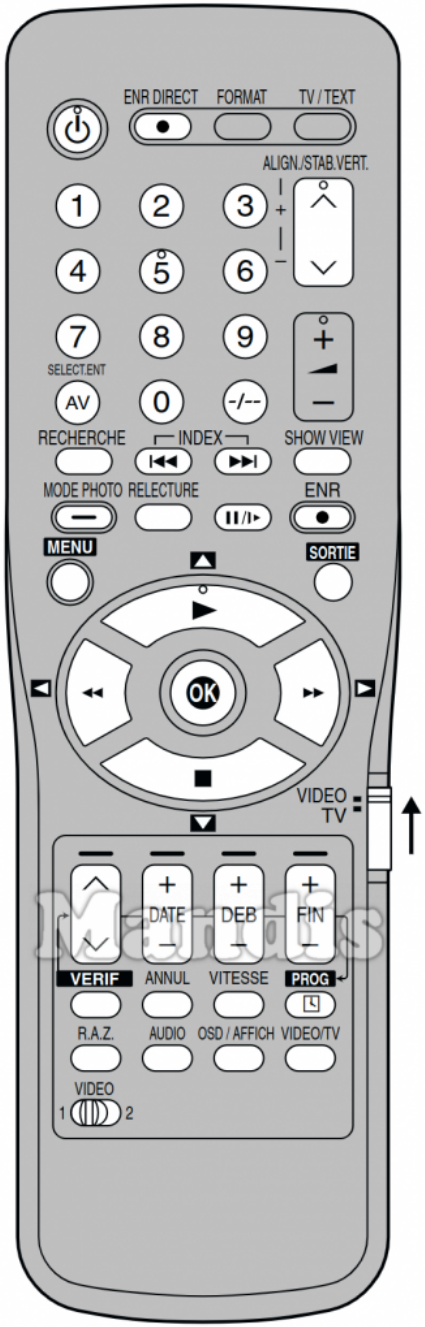

Original		Replacement		Original		Replacement	
OK	OK	OK	OK	R.A.Z.	Reset	SHIFT + VIDEO 4	Shift + 4
Right	Right	Right	Right	AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
>>	>> / Tune+	TUNE+	>> / Tune+	OSD / AFFICH	OSD Affich	ANGLE INFO	Info / Angle
Down	Down	Down	Down	VIDEO/TV	AV Link	LIST SMART	Smart / List
Stop	Stop / Hold	HOLD	Stop / Hold				
	Verif Up/Red	SHIFT + CH PAGE +	Shift + CH+ /				
DATE +	Date+/Green	SHIFT + DVD 2	Shift + 2				
DEB +	Deb+/Yellow	SHIFT + CD - STB 3	Shift + 3				
FIN +	Fin+/Blue	SHIFT + AUX - HDD 7	Shift + 7				
	Verif Down	SHIFT + CH PAGE −	Shift + CH- /				
DATE −	Date-	SHIFT + TAPE 5	Shift + 5				
DEB −	Deb-	SHIFT + TUNER 6	Shift + 6				
FIN −	Fin-	-/-- GUIDE EPG	Guide / EPG / -/--				
VERIF	Verif	RETURN BACK	Back / Return				
ANNUL	Annul	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear				
VITESSE	SP/LP/EP	EQ SUBTITLE	Subtitle / EQ				
PROG	Prog	TIMER SLEEP	Sleep / Timer				

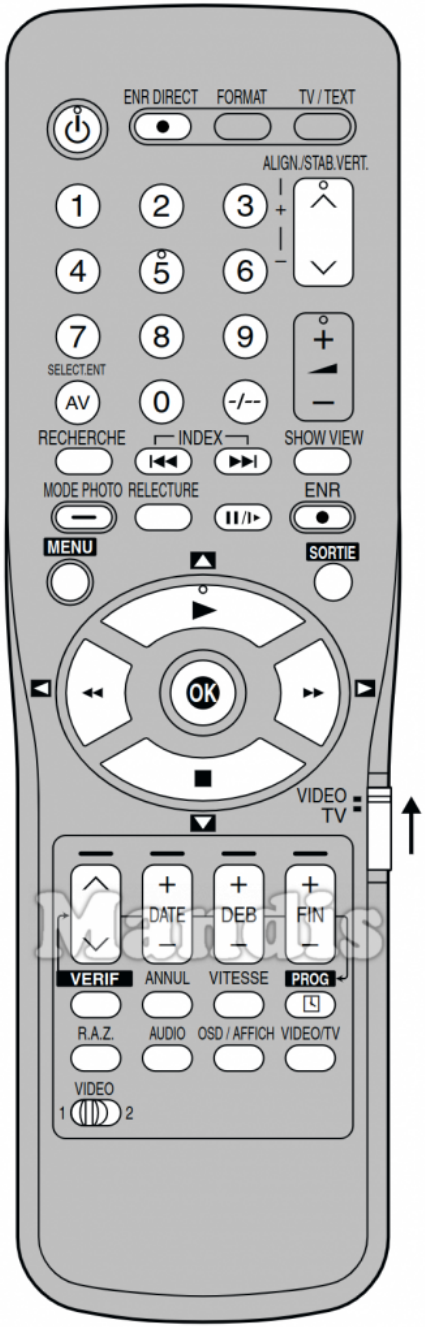

Original	Replacement	Original	Replacement
Power	Power	-/--	Guide / EPG / -/--
Format	Picture / Format	Vol -	Vol -
Tv/Text	Text / Goto	Verif Up	Up
1	1	Red	Red / Netflix / Search
2	2	Green	Green / APP / Repeat
3	3	Date+	Right
Align / Stab. Vert. +	CH+ / Page+	Yellow	Yellow / YouTube / Repeat
4	4	Deb+	Shift + Vol +
5	5	Blue	Blue / Prime Video / Random
6	6	Fin+	Shift + CH+ /
Align / Stab. Ver	CH- / Page-	Verif Down	Down
7	7	Date-	Left
8	8	Deb-	Shift + Vol -
9	9	Fin-	Shift + CH- /
Vol +	Vol +		
AV/Select Ent	AV / Input / RDS		
0	0		