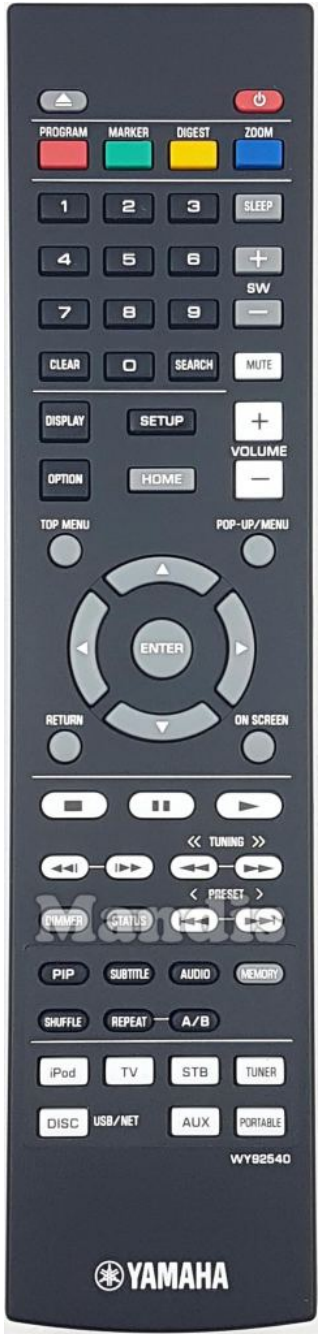

Original		Replacement	
	Open/Close	SURROUND	Eject / Surround
	Power		Power
PROGRAM	Red/Program	NETFLIX SEARCH	Red / Netflix / Search
MARKER	Green/Marker	APP REPEAT	Green / APP / Repeat
DIGEST	Yellow/Digest	YouTube REPEAT A-B	Yellow / YouTube / Repeat
ZOOM	Blue/Zoom	Prime Video RANDOM	Blue / Prime Video / Random
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
SW	SW+	CH PAGE	CH+ / Page+
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9

Original		Replacement	
SW	SW-	CH PAGE	CH- / Page-
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
0	0	HDMI-SAT 0	0
SEARCH	Search	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
DISPLAY	Display	MEDIA DISPLAY	Display / Media
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
VOLUME +	Volume+	VOL +	Vol +
OPTION	Option	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
HOME	Home	HOME MENU	Menu / Home
VOLUME −	Volume-	VOL −	Vol -
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up/Menu	LIST SMART	Smart / List
	Up		Up
	Left		Left
ENTER	Enter	OK	OK
	Right		Right

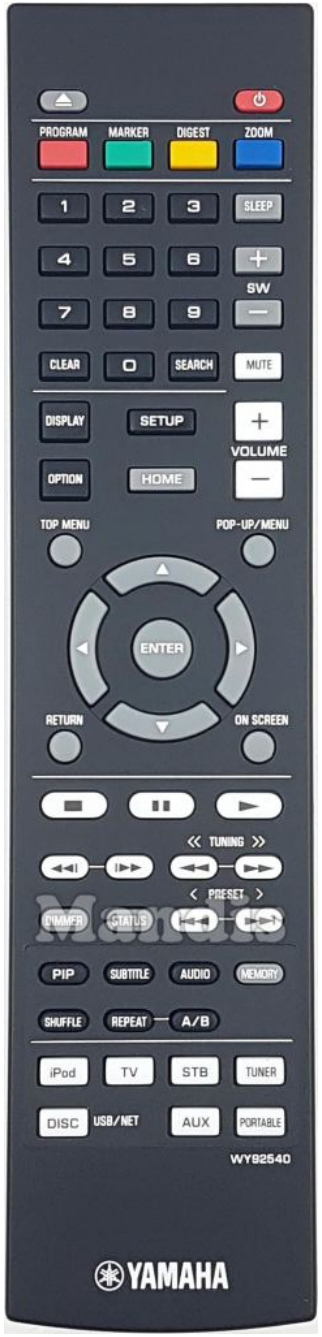

Original	Replacement	Original	Replacement
RETURN Return	RETURN BACK Back / Return	MEMORY Memory	SHIFT + LIST SMART Shift + Smart / List
Down	Down	SHUFFLE Shuffle	SHIFT + SURROUND Shift + Eject / Surround
ON SCREEN On Screen	FORMAT PICTURE Picture / Format	REPEAT Repeat	SHIFT + APP REPEAT Shift + Green / APP /
Stop	HOLD Stop / Hold	A/B A-B	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /
Pause	STEP-FREEZE Pause / Step / Freeze	iPod iPod	SHIFT + MEDIA DISPLAY Shift + Display / Media
Play	SLOW Play / Slow	TV TV	PROGRAM TV/RADIO TV/Radio /
<<I	PRESET- I<< / Preset-	STB STB	SHIFT + CD-STB 3 Shift + 3
I>>	PRESET+ >>I / Preset+	TUNER Tuner	SHIFT + TUNER 6 Shift + 6
<< TUNING <<	TUNE- << / Tune-	DISC USB/NET Disc/USB/Net	SHIFT + USB 8 Shift + 8
>> TUNING >>	TUNE+ >> / Tune+	AUX AUX	SHIFT + AUX-HDD 7 Shift + 7
DIMMER Dimmer	SHIFT + DIMMER MUTE Shift + Mute / Dimmer	PORTABLE Portable	RDS AV INPUT AV / Input / RDS
STATUS Status	GOTO TEXT Text / Goto		
< PRESET I<< / < Preset	SHIFT + PRESET- Shift + I<< / Preset-		
PRESET > >>I / Preset >	SHIFT + PRESET+ Shift + >>I / Preset+		
PIP PIP	ANGLE INFO Info / Angle		
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ		
AUDIO Audio	LANG I/II AUDIO Audio / Lang I/II		