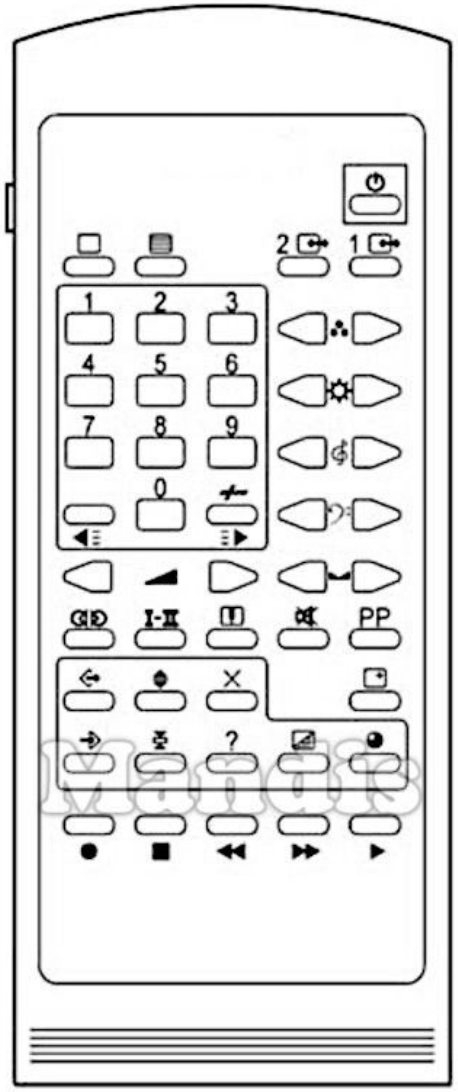

Original		Replacement	
Power		Power	
TV		Smart / List	
Text		Text / Goto	
Source 2		+	Shift + AV / Input / RDS
Source 1		AV / Input / RDS	
1		1	
2		2	
3		3	
Contrast-		I<< / Preset-	
Contrast+		>>I / Preset+	
4		4	
5		5	
6		6	
Brightness-		Down	
Brightness+		Up	
7		7	
8		8	

Original		Replacement	
9		9	
Sol -		<< / Tune-	
Sol +		>> / Tune+	
<=		+	Shift + CH- /
0		0	
-/-- / =>		+	Shift + CH+ /
-/-- / =>		Guide / EPG / -/--	
Fa-		Left	
Fa+		Right	
Vol -		Vol -	
Vol +		Vol +	
><		CH- / Page-	
><+		CH+ / Page+	
OO		Sound / Title	
I-II		Audio / Lang I/II	
[|]		Zoom / Size	
Mute		Mute / Dimmer	

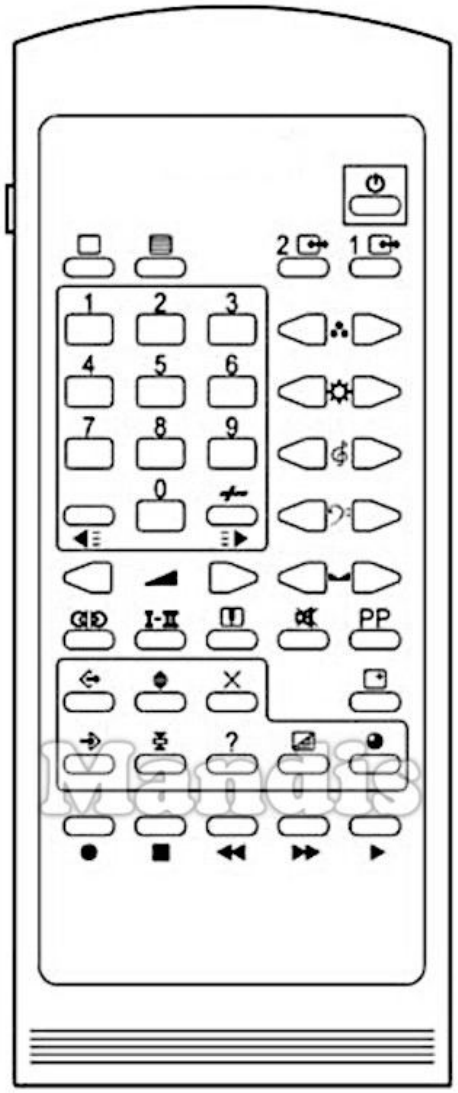

Original		Replacement		Original		Replacement	
PP	PP	RETURN BACK	Back / Return				
Exit	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear				
Size	Size	SHIFT + SIZE ZOOM	Shift + Zoom /				
Cancel	Cancel	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear				
[+]	[+]	ANGLE INFO	Info / Angle				
Enter	Enter	OK	OK				
Hold	Hold	HOLD	Stop / Hold				
Reveal	Reveal	PROGRAM TV/ RADIO	TV/ Radio /				
Mix	Mix	SHIFT + GOTO TEXT	Shift + Text /				
Subcode	Subcode	EQ SUBTITLE	Subtitle / EQ				

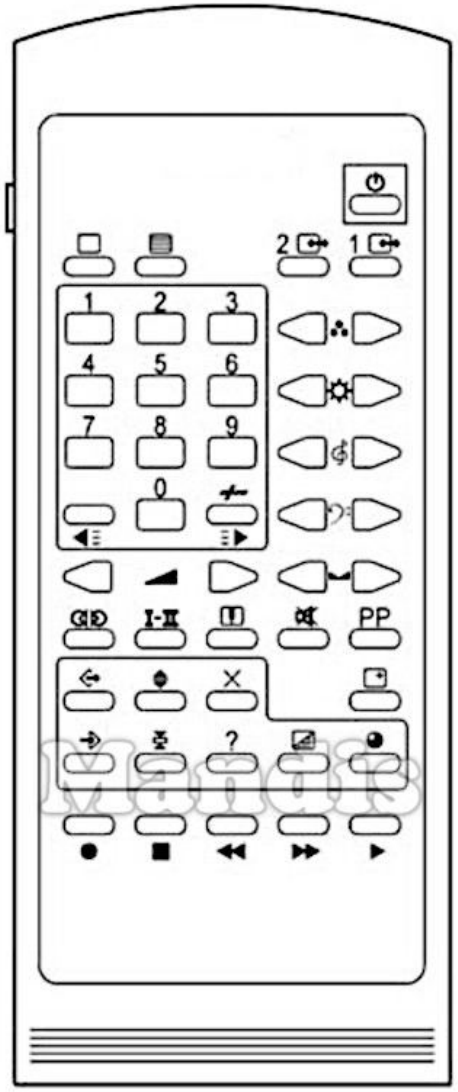

Original		Replacement		Original	Replacement
	Rec	REC MODE	Rec / Rec Mode		
	Stop	HOLD	Stop / Hold		
	<<	TUNE-	<< / Tune-		
	>>	TUNE+	>> / Tune+		
	Play	SLOW	Play / Slow		

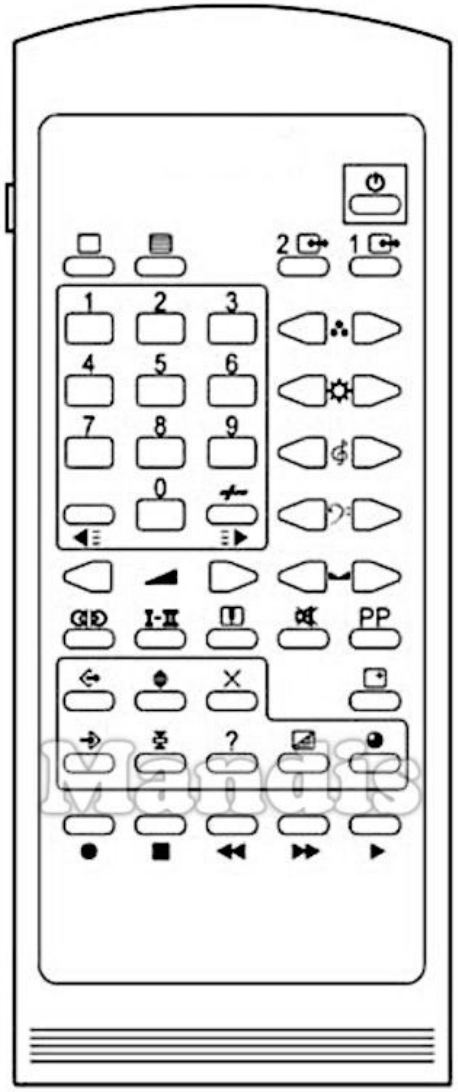

Original	Replacement	Original	Replacement
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
<<	<< / Tune-		
>>	>> / Tune+		
Play	Play / Slow		