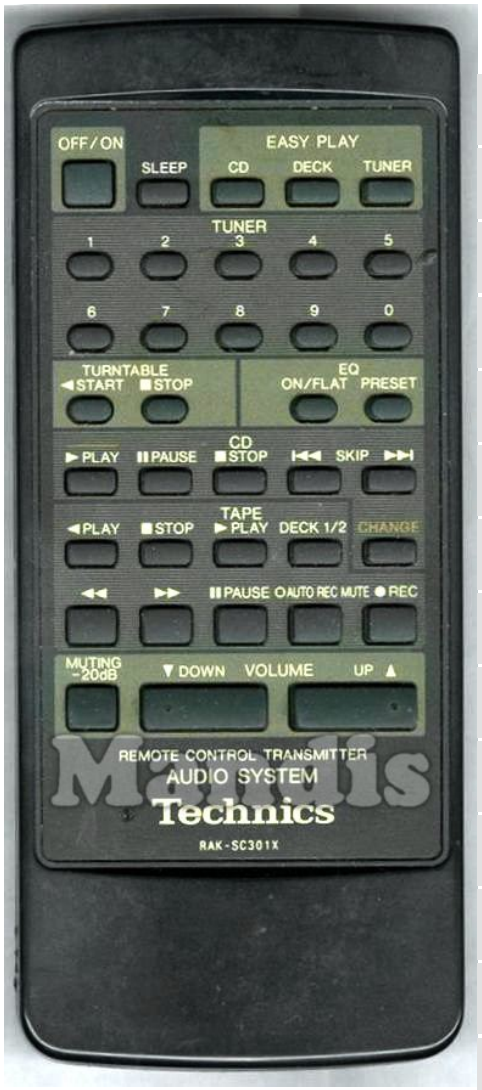

Original	Replacement	Original	Replacement
Off / On	Power	Tuner 1	1
On Flat EQ	Display / Media	Tuner 2	2
Preset EQ	Smart / List	Tuner 3	3
Muting -20dB	Mute / Dimmer	Tuner 4	4
CD Play	Play / Slow	Tuner 5	5
CD Pause	Pause / Step / Freeze	Tuner 6	6
CD Stop	Stop / Hold	Tuner 7	7
Tape <<	<< / Tune-	Tuner 8	8
Tape >>	>> / Tune+	Tuner 9	9
CD I <<	I << / Preset-	Tuner 0	0
CD >>I	>>I / Preset+	Tape Play	Right
Tape Deck 1 /	Audio / Lang I/II	Tape Pause	Shift + Pause / Step /
Sleep	Picture / Format	Tape Stop	Shift + Stop /
Turntable Play Reverse	Left	CD Program	Shift + Picture / Format
Turntable Stop	OK	Tape Play	Shift + Left
Volume Up	Vol +	Easy Play CD	Shift + 1
Volume Down	Vol -	Easy Play Deck	Shift + 5

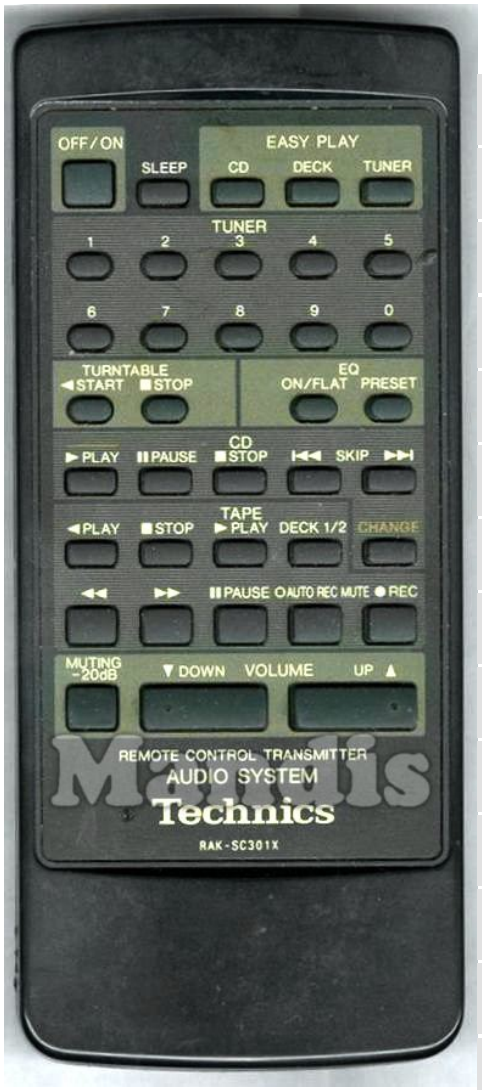

Original	Replacement	Original	Replacement
TUNER Easy Play Tuner	SHIFT + TUNER 6 Shift + 6		

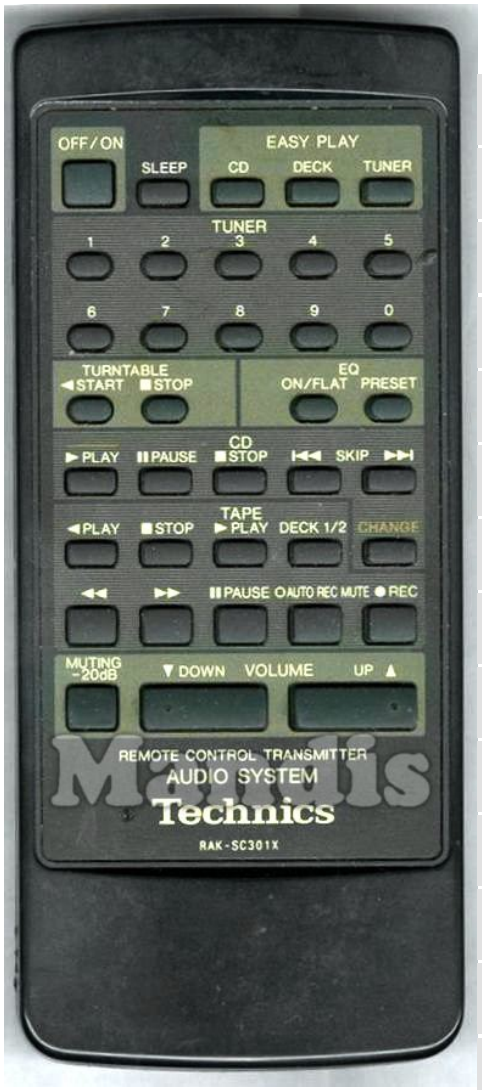

Original		Replacement		Original		Replacement	
OFF/ON	Power Tape		Power		>>I Tape	PRESET+	>>I / Preset+
DECK	Tape	LIST SMART	Smart / List				
1	1 Tape	TV 1	1				
2	2 Tape	DVD 2	2				
3	3 Tape	CD-STB 3	3				
4	4 Tape	VIDEO 4	4				
5	5 Tape	TAPE 5	5				
6	6 Tape	TUNER 6	6				
7	7 Tape	AUX-HDD 7	7				
8	8 Tape	USB 8	8				
9	9 Tape	BLUETOOTH 9	9				
0	0 Tape	HDMI-SAT 0	0				
STOP	Stop Tape	HOLD	Stop / Hold				
PLAY	Play Tape	SLOW	Play / Slow				
	I <</ << Tape	TUNE-	<< / Tune-				
	I << Tape	PRESET-	I << / Preset-				
	>>/ >>I Tape	TUNE+	>> / Tune+				

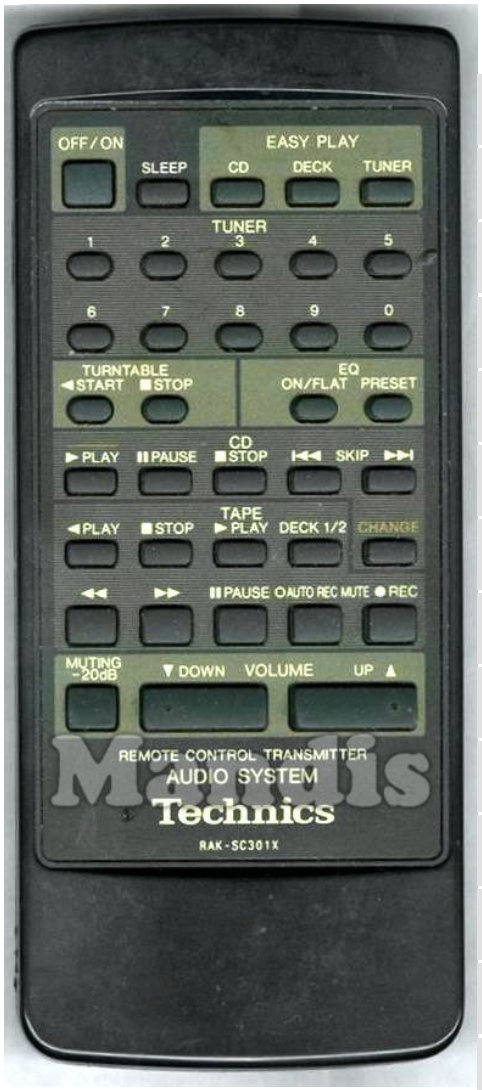

Original	Replacement	Original	Replacement
Power Tuner	Power		
Tuner	Zoom / Size		
1 Tuner	1		
2 Tuner	2		
3 Tuner	3		
4 Tuner	4		
5 Tuner	5		
6 Tuner	6		
7 Tuner	7		
8 Tuner	8		
9 Tuner	9		
0 Tuner	0		
I <</ <<	<< / Tune-		
>>/ >>I	>> / Tune+		