Mandis shop

P404

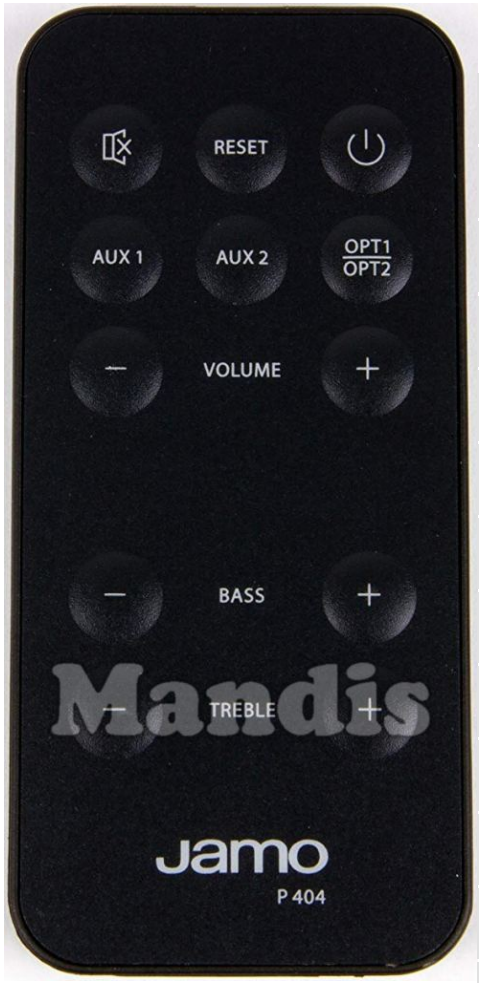

Original		Replacement		Original	Replacement
	Power		Power		
RESET	Reset	CLEAR EXIT	Exit		
AUX 1	AUX 1	HOME SMART	Smart		
AUX 2	AUX 2	APP MEDIA	Media		
OPT1 OPT2	OPT1/OPT2	SETTINGS OPT	Options		
VOLUME +	Vol+	+ VOL	Vol +		
− VOLUME	Vol-	VOL −	Vol -		
	Mute	MUTE	Mute		
BASS +	Bass+	+ CH	Ch +		
− BASS	Bass-	CH −	Ch -		
TREBLE +	Treble+		Up		
− TREBLE	Treble-		Down		

https://all-remotes.online/en/JAMO/1058166-90425-replacement-remote-control-for-JAMO-P404.html